

Bell System (Telephones) Ltd.

bell*free*

2-72 Multi Way

Video Door Entry System

With

Hands-free Colour Apartment Stations

Installation & Operation Manual

This manual applies to the following: -

BFD2-72 Way Door controller – Version 1 Builds 1

BF Colour Apartment Station – Version 1 Build 1 to 2

BS Colour Videophone – Version 2 Builds 1 to 3

BSA Audio Phone – Version 1 Build 1

BSC4 Video Controller – Version 2 Build 7

BF Apartment Station 2-72 Way System



bell*free* Apartment Station



BFD8 controller



BSC4 controller



BSA audiophone



BS videophone



BS Deskphone

TABLE OF CONTENTS

TABLE OF CONTENTS	3
INTRODUCTION	4
DESCRIPTION	4
MAIN FEATURES	4
BASIC SYSTEM OPERATION.....	6
DESIGN CONSIDERATIONS.....	9
EQUIPMENT LIST.....	9
OPTIONS.....	9
POWER SUPPLY REQUIREMENTS	11
CABLE SPECIFICATION	13
CABLE DISTANCES.....	14
INSTALLATION & COMMISSIONING	15
CHECKLIST.....	15
WIRING.....	15
COMMISSIONING	19
BFD8/72 DOOR CONTROLLER SWITCH SETTINGS.....	20
BFD8/72 DOOR CONTROLLER JUMPER SETTINGS	22
BSC4 VIDEO CONTROLLER SETTINGS.....	23
BF APARTMENT STATION SWITCH SETTINGS	25
BS VIDEOPHONE SWITCH SETTINGS	26
TROUBLESHOOTING	27
COMMON FAULTS	27
QUICK FAULT REFERENCE.....	27
SPECIFICATIONS.....	30
DIAGRAM A – 2-72 WAY BASIC SYSTEM WIRING OVERVIEW	33
DIAGRAM B – BFD8 PCB DETAIL	34
DIAGRAM C – 2-72 WAY BASIC SYSTEM WIRING DETAIL.....	35
DIAGRAM D – BSC4 PCB DETAIL	36
DIAGRAM E – BSC4 WIRING DETAIL.....	37
DIAGRAM F – LARGE SYSTEM OVERVIEW	38
DIAGRAM G – EXTENSION APARTMENT STATION WIRING.....	39
DIAGRAM H – APARTMENT STATION LOCAL POWER WIRING	40
DIAGRAM I – CAMERA SHARING & TIME CLOCK SHARING	41
DIAGRAM J – 2-72 WAY ADDITIONAL DDA WIRING	42
DIAGRAM K – COMBINED CONNECTIONS BELLFREE WITH LOCK.....	43
DIAGRAM L – COMBINED CONNECTIONS THIRD PARTY LOCK.....	45
SAFETY INFORMATION AND DECLARATIONS	47

Introduction

Description

A bellfree video door entry system consists of a door panel, positioned at the entrance of a building, video apartment stations, placed inside of the building for the convenience of the occupants and a power supply and controller which are usually located inside an electrical cupboard. The door panel comprises of a two-way speech unit, a camera and several push buttons – one of which must be depressed by a visitor to initiate a call. The apartment station, which rings in response, allows a two-way hands free conversation (a touch is required to initiate the conversation and end the conversation) whilst the caller can be observed through the integral display. The operator can selectively allow visitors access to the building by touching a pad on the apartment station and so electrically releasing the door.

The bellfree 2-72-way Video Door Entry System is suitable for any building requiring multiple push buttons at the entrance, such as blocks of flats or multiple offices. For buildings requiring a single push button at the entrance, such as houses, individual flats and offices, please refer to the “bellfree 1-way Video Entry System” manual. For a digital panel with display, refer to the bellfree *Digital* System.


The bellfree “2-72-way” system is supplied with a dedicated door controller, for each entrance, and a video controller for every four apartment stations. The basic system supports 1 apartment station per call button, and up to 3 extension apartment stations (more with additional power supplies). Multiple entrances can be supported with the addition of one panel and one door controller for each entrance.

Main Features

- Enhanced audio for hands free operation
- Cat5 cable throughout; no co-ax required!
- 3.5” Flat screen high resolution TFT colour display.
- High resolution CCD colour day/night camera with infrared lamps.
- 12V d.c. operation
- High quality full-duplex speech amplifier.
- Automatic picture display while ringing.
- Ringer mute function.
- Ringer volume control.
- Fail safe or fail secure lock releases and magnetic locks (maglock).
- Lock release timer.
- Tradesman facility (optional).
- Facility for exit button and/or fire switch.
- Door open indication.
- Second camera option.
- Up to 3 extension Apartment stations per flat.
- DDA panel options.
- Multiple entrances supported.

BF Apartment Station 2-72 Way System

bell *free* Colour Apartment Station

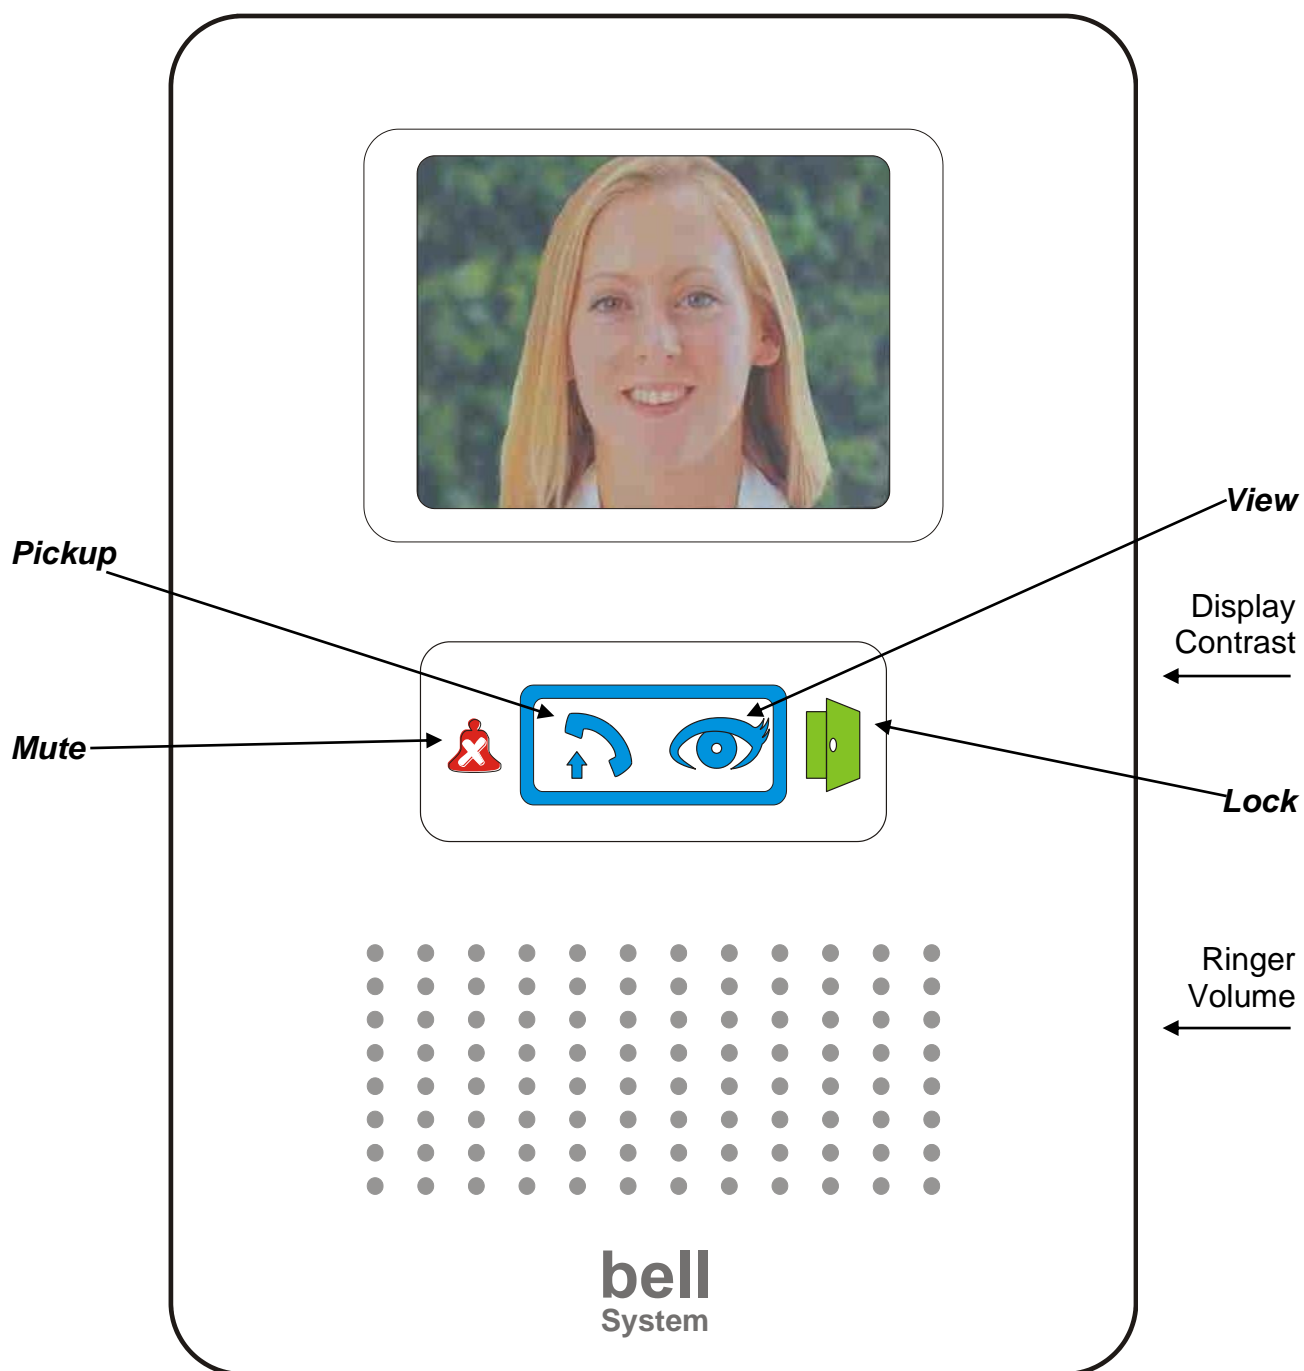

Symbol	Lamp	Steady	Flashing
Mute on/off	Red	Apartment station is muted	
Pickup / end	Blue	Call in progress	Ringing
View / camera select			
Lock	Green	Door is open	Touch to release lock
All symbols	All		Doorbell

Basic System Operation

Call sequence

When the **call** button is pressed at the entrance panel the apartment station will ring and its blue **pickup / view** lamp will flash, highlighting the **pickup** and **view** symbols. The apartment station will continue to ring for up to 30 seconds or until the resident responds by touching the **view** symbol (see silent viewing below) or the **pickup** symbol. After using the **pickup** symbol the resident can freely converse with the visitor whose image is now displayed on the apartment station; at the same time the green **lock** symbol will flash to highlight the **lock** function.

The call may be terminated by touching the **pickup** symbol again or more usually by touching the **lock** symbol first to allow the visitor access through the entrance; the speech and picture will persist for a further 3 seconds while the door is being released.

Silent viewing

When the apartment station is ringing the resident can touch the **view** symbol to answer the call instead of the **pickup** symbol; this will stop the apartment station ringing and enable them to view the visitor for up to 60 seconds or until the **lock** symbol is touched to release the door. Silent viewing can be 'normalised' at any time by touching the **pickup** symbol and conversing with the visitor as described above.

Apartment Station Controls

The diagram in the introduction shows the apartment station and its controls. The controls are adjusted by touching the end of the slider and sliding the finger up and down. The default setting is ringer volume halfway and contrast slider fully down.

Auto Display

When 'Auto Display' mode is selected the picture will come on while the apartment station is ringing, otherwise the picture will only come on when the call is answered. Auto Display mode is usually pre-selected at installation and generally only one apartment station per flat should be set in this mode (see 'Extension Apartment Stations' below).

Ringer Mute

The resident can mute the ringing sound in the apartment station when they do not wish to be disturbed. Ringer mute is activated by touching the **mute** symbol on the apartment station, which then illuminates in red as a reminder. Touching the **mute** symbol a second time will disengage the mute function. Ringer Mute only stops the audible ring, but the blue ring lamp will still flash and all other functions work normally. Ringer mute will continue for the pre-set time even if a call is answered.

During installation it is possible to set a time limit for the mute function in various values from 2 minutes up to 10 hours or indefinitely. When this time period has elapsed the mute function will automatically disengage. Default timeout is never (See 'mute timer', page 25).

Door Status Indication

The green **lock** lamp on the apartment station will illuminate to warn the resident that a door has been left open following a call. This feature requires a door monitor contact to be fitted.

BF Apartment Station 2-72 Way System

Call Privacy

Once a call has been made from an entrance panel only the apartment station(s) which is / are ringing may answer the call. Once the call is answered another apartment station will not activate (including extensions of the active apartment station).

User Activation (CCTV Mode)

User activation is a feature of the bellfree 1 way system and is not available on multi-way systems. User activation is generally not recommended on larger systems as the conflicting demands of residents and callers can result in confusion and erroneous fault reports.

Cameras

The door controller has the capability of using one or two cameras, for instance a second panel camera for DDA or a 'third party' 'CCTV' camera located to offer a different entrance viewpoint. Touching the **view** symbol will alternate the view between camera 1 and camera 2 (if enabled).

Note. The camera to controller wiring has termination options which allow for connections to other video equipment. See the Camera sharing diagram on page 41 for details.

Extension Apartment Stations

Additional apartment stations may be added to the basic system. The number of extensions is limited only by power supply considerations. All apartment stations for that 'flat' will ring when called however typically only the master unit will display a picture while ringing. Once the master or extension apartment station is 'picked-up' the picture will display on that unit alone. An extra power supply may be used to allow extension apartment stations to display a picture while ringing.

Lock Type

The door controller supports both fail-secure and fail-safe locks including magnetic locks of up to 1A rating. The lock time may be programmed between 1 and 99 seconds. (See 'Lock Operating time' and 'Lock Type' on page 21.

Exit Button and Fire Switch

An input is provided for an exit button, which can be installed on the inside of the door and allow residents to exit freely. Momentary operation of this button will operate the lock release for the programmed lock time. A Fire switch or other override device may use the same input to hold the door open indefinitely. Note. Fail secure locks must be continuously rated.

Trades Facility

Use of a time clock in conjunction with a trades button will allow free access during the programmed time(s).

DDA Functionality

The bellfree video system has a range of options for entrance panels to help meet the requirements of the Disability Discrimination Act (DDA), including Illuminated Tactile buttons, reassurance tones and LED indicators for "Speak Now" and "Door Open". Contact your sales representative for further details.

Reassurance tone setting is on page 22.

Multiple Entrances

The bellfree system allows multiple entrances to be catered for by the addition of a door controller and entrance panel for each entrance and additional power supplies.

In a multiple entrance system an optional feature allows the resident to view the cameras at all the entrances with successive touches of the **view** symbol.

For details of this camera feature and user activation see the setting for 'Camera Numbering' on page 22.

Gate and Block Systems

Sites with two or more blocks sharing one or more site entrances are catered for with our BSSW Gate controller. The blocks can then work independently but will receive calls from the shared entrance.

For further details see the "*bellissimo* and Bellcall Manual Gate and Block (PD-120)".

Design Considerations

Equipment List

A BF-n **bellfree** Video Kit (where n is the no of ways) comprises the following: -

Model No	Description
N x BF	Colour apartment station
1 x BFPn	Vandal resistant panel with a BF-AMP speech unit, VR buttons and camera.
1 x BFD8 or BFD72	Door controller (BFD72 required for > 8 ways)
M x BSC4	Video controller (one required for every 4 ways = N/4 rounded up)
K x PS4	4A 12V power supply. (one required for every 8 to 16 ways)
1 x 203	Fail-secure lock release, alternate types available

E.g. A BF6 Six way **bellfree** Video Kit comprises the following: -

Model No	Description
6 x BF	Colour apartment station
1 x BFP6	Panel with a speech unit and camera
1 x BFD8	Door controller
2 x BSC4	Video controller
1 x PS4	4A 12V power supply
1 x 203	Fail-secure lock release

E.g. A BF22 Twenty two way **bellfree** Video Kit comprises the following: -

Model No	Description
22 x BF	Colour apartment station
1 x BFP22/VR	Vandal resistant panel with a speech unit and camera
1 x BFD72	Door controller
6 x BSC4	Video controller
2 x PS4	4A 12V power supply
1 x 203	Fail-secure lock release

Options

The following options are available: -

- Extensions using model **BF** apartment station(s).
- Extensions using Videophone model **BS**.
- Extensions using Audio only phones model **BSA**.
- Additional entrances, each comprising a **BFD8** or **BFD72** controller and **BFPn** panel. (See also power supply requirements).
- Alternative lock releases, fail-safe and fail-secure.
- Timed Trades facility; specify **TRBS** to add another button and a **TS2000-BST** time-clock. The extra button will be engraved "TRADES"
- Exit button. Model **5077** surface and model **5078** flush versions are available.
- Battery back-up power supply, **Model 840** (12V 4A).
- DDA panels (Contact sales for further information).

Entrance Panel – Important Note

Careful consideration should be given to the location of the entrance panel to ensure the best possible lighting conditions for the camera. In general strong back lighting of the subject (by the sun and sky) should be avoided, as the contrast between foreground and background may be too great for the camera. The field of view should contain as little of the sky as possible, particularly if south facing. If a backlit situation is unavoidable, additional lighting may be necessary to illuminate the caller and avoid a dark outline image (silhouette). A light coloured or reflective surface around the panel will redirect backlight to illuminate the caller.

Door Controller

The door controller and power supply should be wall-mounted in a convenient cupboard or other protected environment with available mains power. Cable length to the entrance should be less than 50m. The door controller for the second and subsequent entrances may be situated in the same location, or to meet the 50m requirement may be situated in another location. Power supplies may be shared between door controllers placed in the same location, but controllers in separate locations must be separately powered.

Video Controller

The video controller(s) and power supply(ies) should be wall-mounted in a convenient cupboard or other protected environment with available mains power. Cable length to the apartment station should be less than 150m, see 'Cable Distances' page 14. In many cases the video controllers will be in the same location as the door controller(s), but they may be distributed as required to reduce wiring distances. When placed in different locations, each location must have its own local power supplies.

Gate Controller

The gate switch controller BSSW is wired between the block door controllers and the video controllers, so would normally be wall mounted next to a door controller.

For further details see the "*bellissimo* and Bellcall Manual Gate and Block (PD-120)".

Separately Powered Apartment Stations

The limitation of up to 4 apartment stations ringing but only one displaying, as indicated in the power supply and cable distance tables on page 14, can be overcome by the use of supplementary power from a 340C.

Power Supply Requirements

The system is powered by 12V power supplies only: -

Model PS4 12V, 4A.

Model 840 12V, 4A battery backup supply.

Model 340C 12V, 1.5A optional for extensions.

Note 1. The 28V referred to on the apartment station, video controller and wiring diagrams is internally generated in the controller. DO NOT use any power supply other than 12V or damage may occur.

Note 2. The PS4 power supply has been specifically designed to operate with the high-surge requirements of the system. Bell System is unable to guarantee functionality or provide support for systems which use third party power supplies.

Exact power supply requirements depend upon many factors. The number of power supplies included within a standard 'kit' or quotation assumes that all controllers are installed in one location and that there are no extensions.

The following table gives examples of the minimum number of controllers and power supplies for a given number of entrance doors and flats.

System	Control Equipment and Power Supplies
1 door 6 flats	1 x BFD8 door controller 2 x BSC4 video controller 1 x PS4 12V 4A power supply
2 door 6 flats	2 x BFD8 door controller 2 x BSC4 video controller 2 x PS4 12V 4A power supply
1 door 20 flats	1 x BFD72 door controller 5 x BSC4 video controller 2 x PS4 12V 4A power supply
2 door 20 flats	2 x BFD72 door controller 5 x BSC4 video controller 3 x PS4 12V 4A power supply

Distributed installations will typically require more power supplies. Also the use of other equipment such as coded access or proximity readers must be taken into account.

BF Apartment Station 2-72 Way System

The following table is a guide to how much equipment a PS4 power supply can safely and reliably feed, please contact technical support for other variations.

Equipment 1 x PS4 can power	Comments
4 x BSC4 video controllers with 1 BF apartment station per output.	16 apartment station s directly powered. Extensions may be added if separately powered by 340C's.
2 x BSC4 video controllers with 2 to 4 BF apartment station per output.	Extension apartment stations must be set to ring only, use the above configuration to allow the extensions to have a picture while ringing.
1 to 3 BSC4's phones plus extensions	16 apartment station s directly powered.
1 x BFD8/72 door controller and 3 x BFC4 video controllers with 1 BF apartment station per output	12 apartment stations directly powered. Extensions may be added if separately powered by 340C's.
1 x BFD8/72 door controller and 1 x BSC4 video controllers with 2 to 4 BF apartment station per output	Extension apartment stations must be set to ring only, use the above configuration to allow the extensions to have a picture while ringing.
2 x BFD* door controllers (any type) with up to 2 cameras and 1A fail safe locks.	Both door controllers must be in the same location. No spare current available for other equipment unless both cameras or all the lock current is not used.

Cable Specification

All system wiring must be carried out using **Cat5** signal cable and where necessary 1mm² (or greater) power cable as tabulated below. Cat5 cable has a known performance for the transmission of video signals, whilst telephone or alarm cables are not suitable.

Bell System will be unable to offer any warranty or support for systems installed using incorrect cables.

Cat5 Cable Specification

Cat5 is our short reference for EIA standard UTP Category 5 Unshielded Twisted Pair data cable. This is a standard solid core twisted pair cable having 4 pairs (8-cores) and no shield. The cores are in pairs where Blue and 'Blue with a White stripe' are twisted together as the first pair. The other three pairs are similar with main colours Orange, Green and Brown.

- Also available and acceptable are:

UTP Category 5e (Cat5e)

UTP Category 6 (CAT6)

UTP Category 6e (CAT6e)

The exact cable can be chosen from the above on cost and availability grounds.

- STP (Shielded Twisted Pair) cables are **not** recommended.
- UTP "patch cables" are **not** recommended.

NOTE: Cat5 cable is easily identifiable as the specification is printed on the sheath

BF Apartment Station 2-72 Way System

Cable Distances

Video Controller to BF Apartment Station			
System	Distance	Cable	Comments
Single apartment station per output or first apartment station	< 150m	1 x Cat5	
	< 300m	1 x Cat5 2 x 1mm ²	
Single apartment station + 3 extensions on each output, all cable powered	< 50m	1 x Cat5	Only Master apartment station has 'Auto display'; extensions are daisy-chained
	< 200m	1 x Cat5 2 x 1mm ²	
Single apartment station per output with separately powered extensions	< 150m	1 x Cat5	150m maximum to the cable powered apartment station; daisy-chain up to 300m total.
	< 300m	1 x Cat5 2 x 1mm ²	
All apartment stations locally powered with a 340C power supply	< 300m	1 x Cat5	Locally powered apartment stations have 'Auto display'; extensions are daisy-chained
	<25m to 340C	1 x pair of Cat5	
	<100m to 340C	2 x 1mm ²	

Door Controller to Video Controller(s)			
System	Distance	Cable	Comments
All Systems	<200m	1 x Cat5	N.B. maximum length from any camera to any apartment station to be less than 300m

Panel to Door Controller			
System	Distance	Cable	Comments
All Systems, each entrance	<50m	7 x pair of Cat5 +1 wire per button	See page 33 for detail
Lock Release up to 1A	<10m	1 x pair of Cat5	
	<50m	2 x 1mm ²	
Option: Exit button	<50m	1 x pair of Cat5	
Option: Trades button	<50m	1 x pair of Cat5	Requires a Time-clock
Option: Door Monitor Switch	<50m	1 x pair of Cat5	

Power Supply to Controller			
System	Distance	Cable	Comments
All Systems, each PS4 to BFD8 or BFD72 or BSC4	<3m	2 x 1mm ²	Total length of any daisy chain
	<5m	2 x 1.5mm ²	

NB. A Cat5 cable has 4-pairs (8 cores)

For larger cable distances please contact manufacturer.

Installation & Commissioning

Checklist

The following checklist is a summary of what is required. Refer to the relevant pages for further details.

- Review the section headed 'Safety Information' on page 47.
- Ensure that 'Design Considerations' on page 9 have been understood.
- Confirm that Cat5 cable has been specified.
- Install the system according to instructions in this section.
- Check/set the door controller jumper and switch settings.
- Check/set the video controller jumper and switch settings.
- Check/set each apartment station dip-switch settings.

Wiring

Refer to the diagrams from page 33 onwards as appropriate for the equipment you have.

All wiring is carried out using a mixture of Cat5 for the signal wiring and 1mm² (or greater) cores for the power wiring; refer to Page 13 for further details. It is strongly recommended that a consistent colour code be used throughout such as that indicated on the connection diagram. Certain signals must be interconnected using a twisted pair from the Cat5 cable. These are clearly marked on the connection diagram and should be strictly observed.


Entrance Panel

The panel should be mounted at an optimum height of 1.6 m, measured between the ground and the centre of the camera window. DDA considerations may reduce this height to 1.4m. With flush mounting panels it is advisable to apply mastic to the top and side edges of the panel to prevent water ingress behind the panel, but not to the bottom edge. On construction sites the panel must be protected from corrosive substances such as 'brick acid'. The panel should be cleaned only with a damp cloth containing dilute detergent.

Apartment Station


The apartment station is designed to be surface or flush wall mounted onto plasterboard or other masonry at an optimum screen height of 1.6m. DDA considerations may reduce this height to 1.4m. Dimensions are shown in the diagrams below.

Surface Mounting

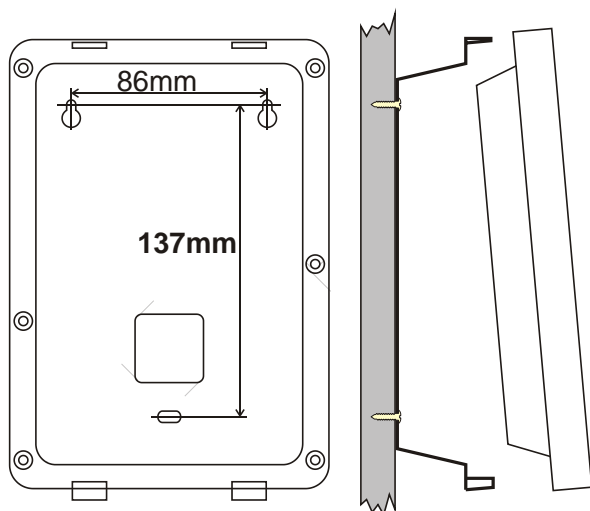

Mounting requires three No 8 screws (not supplied) and wall plugs may also be needed for a secure fixing.

Flush Mounting

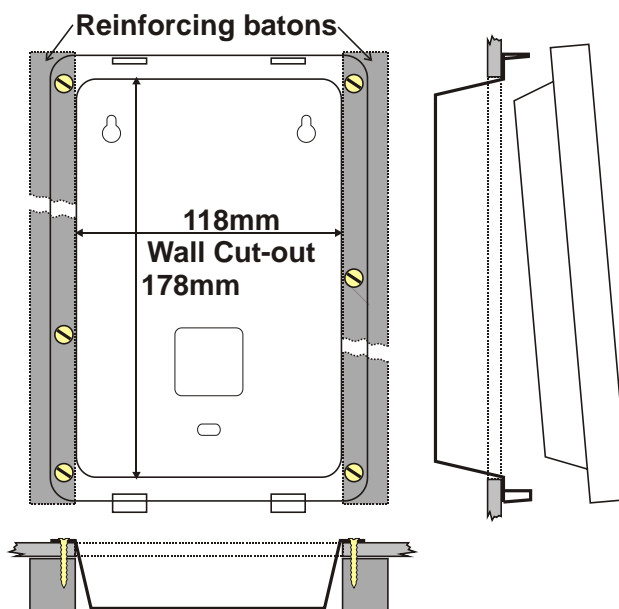

Flush fixing requires a hole in the plasterboard reinforced with batons to give a solid fixing for the four or six No 8 screws.

The reinforcing batons are longer than the cut-out, so they may need to be split to allow insertion.

The apartment station unit is removed from the wall mounting box by pushing in the two circular buttons at the bottom and pulling apart, once open far enough the two hanging clips will release/lift off.

Replace the apartment station unit by hanging it on to the two hooks at the top of the wall mounting box and then push the bottom of the unit onto the two sprung clips.

Top, bottom and rear cable entry alternatives are available in the wall mounting box.

The Video terminator and dip-switch options are available from the back of the removable unit.

The video terminator jumper is next to the removable 10 way connector block. Dip-switch settings are summarised on the adjacent label (see also Page 25).

Doorbell


The apartment station has a doorbell function which is activated by the closure of a normally open contact. This would typically be from a non-illuminated door push.

BSA Audio Phone

The BSA audio phone can be used as a lower cost alternative to an extension apartment station. It is styled like the *bellissimo* videophone. The phone is manufactured in high-impact ABS plastic that imparts high durability and compliments most wall furnishings. It incorporates both ***mute*** and ***lock*** illuminated buttons and it has an Electronic Ringing Tone with an internal rotary pre-set volume control.

Remove the top cover of the BSA phone, which is secured by clips at both sides, by using both hands and placing fingers under the edges and using thumb pressure to release the clips.

The BSA audio phone should be fixed with two No 8 screws (not supplied).

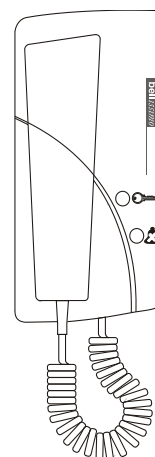


Videophone (Alternative to Apartment Station)

The BS Videophone is designed to be wall mounted onto plasterboard or other masonry at an optimum height of 1.6m. DDA requirements may require this to be lower.

Remove the top cover of the Videophone, which is secured by clips at both sides, by using both hands and placing fingers under the edges and using thumb pressure to release the clips.

If top or bottom cable entries are required, carefully remove the appropriate cut-out with side snips taking care not to damage any internal components.

The Videophone should be fixed with three No 8 screws (not supplied).

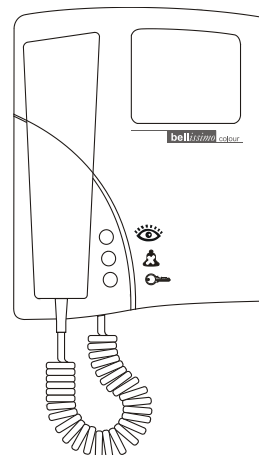

The Videophone is hung on the top two screws, allowing the cable (if present) to feed through and then the third screw is inserted at the bottom. Tighten all three screws.

Before replacing the Front Cover remove the protective film from the display lens and also check that the dip-switch settings are correct or change as necessary (see Page 26).

Electric Door Release

Both fail-secure and fail-safe lock releases (including magnetic locks) use the same terminals. To set the lock type, refer to the 'Door Controller Settings'. When installing lock releases please allow a little movement on the door, as operation will be impaired if fitted too tight.

NB. Magnetic locks (maglocks) must be fitted with a suppressor at the lock terminals. Some manufacturers fit an acceptable internal suppressor.

Fail Safe Exit: Notes

Fail safe exits using maglocks require an exit button and this should be normally open so that the controller can be used to give a timed exit. If the exit button has both normally open and normally closed contacts, then the normally closed contact can be wired in series with the release or maglock along with the break glass in case of equipment failure.

A not uncommon problem with maglocks, because they cannot be mechanically overridden, is being locked out of the building due to lost codes, fobs or equipment failure. So consider an alternate building entrance, or an externally accessible secure keyswitch, or a reliable method of disabling the system during overnight secure lockup.

Fail Secure Exit: Notes

Commonly fail secure exit doors incorporate a thumb-turn, door handle or mini push bar rather than use of an exit button. Fire officers usually require a minimum of door handle or push bar to open a door on a fire exit route – not a thumb-turn.

Most fail secure locks are not continuously rated and if an electrical hold open system is used for say busy times, then a continuously rated release must be used.

Powered bolt, shoot-bolt or other more secure door locking systems may require the use of separate power supplies or a suppressor to be fitted. Shoot-bolt systems for instance tend to require at least 1.5A peak current and this will require the use of an isolation relay and a separate power supply for the lock.

Exit Button Input

The exit button is used to unlock the door for the pre-set lock operating time. The input is designed only for use with a normally open push button. 'Exit +' is the input and 'Exit -' is internally connected to 0V.

The 'Exit +' input can also be used for connection to other equipment to open the door as shown in **Error! Reference source not found..**

Door Open Switch

The door open switch is used to provide an indication at the apartment station that the door has been left open. This switch can have closed contacts when the door is closed or open contacts when the door is closed, the choice being made in Panel Programming. The default of 'contacts open when door closed' must be selected when this feature is not required.

Time Clock Sharing

In a large system a single time clock can be shared between distributed equipment areas by borrowing one of the 'comm -' wires in the interconnecting Cat5 to use as the shared "Time clock common". See the detailed diagram on page 41.

Commissioning

The major components of the bellfree Video system are fitted with high quality pluggable screw terminal blocks. This enables all the connections to the system to be fully completed, whilst easily isolating individual pieces of equipment during testing and commissioning.

When powering up for the first time, it is highly recommended that only the most basic system be connected. i.e. 1 BF apartment station, 1 door controller and panel, and 1 video controller; the remaining equipment can be isolated by unplugging terminal blocks.

NB: Ensure the 1 door and video controller remain interconnected and that the 'end of line' controller is terminated temporarily using the jumpers (see page 23).

Proceed to test the system by calling the apartment station from the door panel in the usual way. Any problems can be resolved by rechecking wiring and connections, assisted by the various suggestions and tests in the section "Troubleshooting". Once the basic system is fully functioning, continue to reconnect and test the remaining equipment item by item until completed.


BFD8/72 Door Controller Switch Settings

Talking Time/ Apartment station Active DIP SW1 (1-4)

4	3	2	1	Talk Time
On	On	On	On	15s
On	On	On	Off	20s
On	On	Off	On	30s
On	On	Off	Off	45s
On	Off	On	On	60s
On	Off	On	Off	75s
On	Off	Off	On	90s
On	Off	Off	Off	120s
Off	On	On	On	150s
Off	On	On	Off	180s
Other settings				60s
Off	Off	Off	Off	60s*

*Default setting

SW1 SW2 SW3

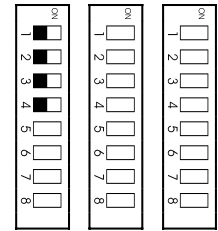


OFF ↔ ON

Ring Time/Call Time and Ring Effect DIP SW1 (5-8)

8	7	6	5	Call Time	Ring Cadence or Sound Effect
On	On	On	On	5s	1 in 3 – 1 ring every 3 seconds
On	On	On	Off	8s	1 in 3 – 1 ring every 3 seconds
On	On	Off	On	10s	1 in 3 – 1 ring every 3 seconds
On	On	Off	Off	15s	1 in 3 – 1 ring every 3 seconds
On	Off	On	On	20s	1 in 3 – 1 ring every 3 seconds
On	Off	On	Off	30s	1 in 3 – 1 ring every 3 seconds
On	Off	Off	On	40s	1 in 3 – 1 ring every 3 seconds
On	Off	Off	Off	45s	1 in 3 – 1 ring every 3 seconds
Off	On	On	On	50s	1 in 3 – 1 ring every 3 seconds
Off	On	On	Off	60s	1 in 3 – 1 ring every 3 seconds
Off	On	Off	On	30s	1 in 3 (Reserved For future use)
Off	On	Off	Off	30s	1 in 3 (Reserved For future use)
Off	Off	On	On	30s	2 in 15 – 2 rings, 15S silence, repeat
Off	Off	On	Off	30s	1 in 15 – 1 ring, 15S silence, repeat
Off	Off	Off	On	30s	1 in 5 – 1 ring every 5 seconds
Off	Off	Off	Off	30s*	1 in 3* – 1 ring every 3 seconds

*Default setting

SW1 SW2 SW3

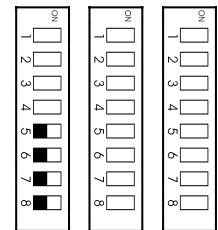

OFF ↔ ON


BF Apartment Station 2-72 Way System

Lock Operate Time Dip SW2 (1-3)

3	2	1	Lock Time
On	On	On	3s*
On	On	Off	4s
On	Off	On	5s
On	Off	Off	6s
Off	On	On	8s
Off	On	Off	10s
Off	Off	On	15s
Off	Off	Off	20s

*Default setting


SW1 SW2 SW3

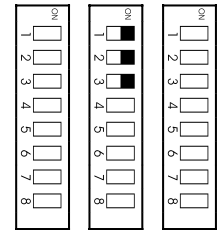

OFF ↔ ON

Individual Functions DIP SW2 (4-8)

SW1 SW2 SW3

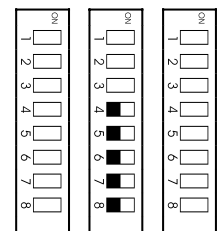

OFF ↔ ON

SW2-4	Lock Type	Lock behaviour during power failure
*Off	Fail secure lock	Requires alternate mechanical means, key or thumb-turn to open on power failure
On	Fail safe lock	Lock opens on power failure
SW2-5	Door Status Switch	Monitors doors left open
*Off	Contacts Open when Door is Closed	The default allows for no switch fitted
On	Contacts Closed when Door is Closed	Standard normally closed switch
SW2-6	Camera 2	How many cameras at this door
*Off	Camera 1 only	Default – single camera per door
On	Enable Camera 2	Second camera at the door
SW2-7	View Function	Camera action when view symbol touched
*Off	Local View	View symbol only selects the camera(s) at this door
On	Global View (See DIP SW3 below)	View symbol sequentially selects all cameras at doors with this switch set
SW2-8	Reserved	
*Off		
On		

*Default setting


BF Apartment Station 2-72 Way System

Camera Numbering DIP SW3 (1-8)

Camera 1 at this door				
4	3	2	1	Number
On	On	On	On	*1
On	On	On	Off	2
On	On	Off	On	3
On	On	Off	Off	4
On	Off	On	On	5
On	Off	On	Off	6
On	Off	Off	On	7
On	Off	Off	Off	8
Off	On	On	On	9
Off	On	On	Off	10
Off	On	Off	On	11
Off	On	Off	Off	12
Off	Off	On	On	13
Off	Off	On	Off	14
Off	Off	Off	On	15
Off	Off	Off	Off	16

Last Camera				
8	7	6	5	Number
On	On	On	On	*1
On	On	On	Off	2
On	On	Off	On	3
On	On	Off	Off	4
On	Off	On	On	5
On	Off	On	Off	6
On	Off	Off	On	7
On	Off	Off	Off	8
Off	On	On	On	9
Off	On	On	Off	10
Off	On	Off	On	11
Off	On	Off	Off	12
Off	Off	On	On	13
Off	Off	On	Off	14
Off	Off	Off	On	15
Off	Off	Off	Off	16

SW1 SW2 SW3

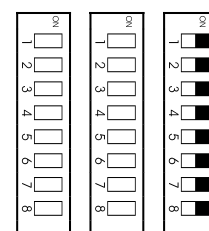

OFF ↔ ON

*Default setting

View Activated by User (CCTV mode)

User activation on 2-72 way system is not available.

'Global View' at Multiple Entrances

For information on this feature consult Bell System (Telephones) Ltd. technical department at the number shown on the last page.

BFD8/72 Door Controller Jumper Settings

Camera Terminator

There is a separate jumper for both video Camera inputs. This has three settings, 75R for terminating coaxial cable, 100R for terminating twisted pair Cat5 cable and None for use when passing the cable on to another device or controller.

Video Gain Control

The "Video Gain" jumper on door controllers should always be set to "0" unless directed by 'Bell System Technical Support'. This jumper is only required on some systems with very long cable runs, camera to apartment station well in excess of 150m. Inappropriate use of this jumper with short runs will cause picture problems.

Reassurance tones

DDA reassurance tones for "ringing" and "door open" are available at the door panel. The volume is adjustable from 0 using the volume control on the BFD8/BFD72 controller PCB (see diagram on page 34).

The lock tone is always active and the ring tone is activated by placing a jumper between pins 5 & 6 of the "Prog-6" pin header on the BFD8/BFD72 controller PCB, the jumper is stored between pins 1 & 2.

BSC4 Video Controller Settings

Jumper settings


The "Video Gain" jumper on video controllers should always be set to "0" unless directed by Bell System Technical. This jumper is only required on some systems with very long camera to apartment station cable runs well in excess of 150m. Inappropriate use of this jumper with short runs will cause picture problems.

The "Video Terminator" jumper must be set to OFF on all but the furthest Video Controller from the Door Controller(s), this one must be set to ON.

Switch settings

SW6 is a rotary 16 position switch which sets the apartment station (Phone) addresses as per the following table. These numbers represent actual flat numbers for the digital controller; they also correspond to the inputs on the BFD8 or BFD72.

SW6 Setting				
Pos	Phone 1	Phone 2	Phone 3	Phone 4
0	None	None	None	None
1	1	2	3	4
2	5	6	7	8
3	9	10	11	12
4	13	14	15	16
5	17	18	19	20
6	21	22	23	24
7	25	26	27	28
8	29	30	31	32
9	33	34	35	36
A	37	38	39	40
B	41	42	43	44
C	45	46	47	48
D	49	50	51	52
E	53	54	55	56
F	57	58	59	60

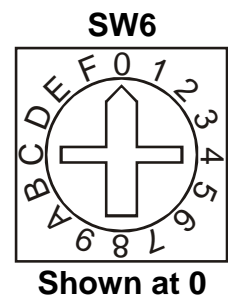

ATTENTION

Each SW6 MUST be set correctly for the phones to ring.

This switch is shipped set to 0 to prevent multiple phones ringing on initial installation.


Address Offset SW7

SW7 is an 8 bit switch that is used to increase the addressing range. For each bit that is switched ON add the corresponding value to the amount set by SW6. This allows flat addresses up to 3210 to be set.

Bit	Offset
1	+1
2	+2
3	+50
4	+100
5	+200
6	+400
7	+800
8	+1600

Each bit on SW7 adds the corresponding amount to the address set by SW6. Do not set a total value above 9995

 SW7



OFF ↔ ON

Odd/Even Addressing Jumper PROG pins 1-2

This jumper alters the addressing of Phone outputs 2, 3 and 4 such that they all become either odd or even numbers. So if the address of output Phone 1 is 12 say the other outputs become 14, 16 and 18. If the address were 31 then the other outputs are 33, 35 and 37.

The use of this jumper precludes the use of extended addressing by PROG pins 2-3, if both are required contact Bell System Technical. The jumper is stored on pins 4-5.

Extended Addressing Jumper PROG pins 2-3

This jumper adds +3200 to the Phone 1 address set using SW6 and SW7. Phone addresses up to 6410 (Phone 1 output) can be set. Custom versions will show the custom offset on the build label.

The use of this jumper precludes the use of Odd/Even addressing by PROG pins 1-2, if both are required contact Bell System Technical. The jumper is stored on pins 4-5.

Custom Alternate Addressing Option

Special versions of the BSC4 can be ordered to allow addressing above 6413. The value +nn00 is shown on the build label. This jumper adds +nn00 to the Phone 1 address set using SW6 and SW7. The jumper is stored on pins 4-5.

For instance by a custom version Build 7+5000 would make the jumper add 5000, the BSC4 would then be able to address from 1 to 3210 and 5001 to 8210 (Phone 1 output).


The use of this jumper precludes the use of Odd/Even addressing by PROG pins 1-2, if both are required contact Bell System Technical. The jumper is stored on pins 4-5.

BF Apartment Station Switch Settings

Mute Time Setting SW2 (1-4)

1	2	3	4	Mute Time
On	On	On	On	Disabled ¹
Off	On	On	On	2 minutes
On	Off	On	On	5 minutes
Off	Off	On	On	10 minutes
On	On	Off	On	15 minutes
Off	On	Off	On	20 minutes
On	Off	Off	On	30 minutes
Off	Off	Off	On	45 minutes
On	On	On	Off	1 hour
Off	On	On	Off	2 hours
On	Off	On	Off	4 hours
Off	Off	On	Off	5 hours
On	On	Off	Off	6 hours
Off	On	Off	Off	8 hours
On	Off	Off	Off	10 hours
Off	Off	Off	Off	*Indefinite ²

 SW2



OFF ↔ ON

*Default setting

¹Disabled means touching the ***mute*** symbol has no effect.

²Indefinite; the ***mute*** is cancelled by touching the symbol again.

SW2



OFF ↔ ON

Individual Functions DIP-SW2 (5-8)

SW2-5	Master / Slave	Which Apartment Station to set
*Off	Master	Only or first apartment station per BSC4 output.
On	Slave / extension	Second and subsequent apartment stations per BSC4 output.
SW2-6	Auto Display on Ring	Apartment Station display behaviour
*Off	Display during ring	Picture is on while ringing, stays on when answered.
On	No display during ring	Picture is off while ringing, comes on when answered.
SW2-7	Spare	Spare
*Off		
On		
SW2-8	Spare	Spare
*Off		
On		

*Default setting

BS Videophone Switch Settings

Mute Time Setting SW2 (1-4)

4	3	2	1	Mute Time
On	On	On	On	Disabled ¹
On	On	On	Off	2 minutes
On	On	Off	On	5 minutes
On	On	Off	Off	10 minutes
On	Off	On	On	15 minutes
On	Off	On	Off	20 minutes
On	Off	Off	On	30 minutes
On	Off	Off	Off	45 minutes
Off	On	On	On	1 hour
Off	On	On	Off	2 hours
Off	On	Off	On	4 hours
Off	On	Off	Off	5 hours
Off	Off	On	On	6 hours
Off	Off	On	Off	8 hours
Off	Off	Off	On	10 hours
Off	Off	Off	Off	*Indefinite ²

SW2



OFF ↔ ON

*Default setting

¹Disabled means pressing the ***mute*** button has no effect.

²Indefinite; the ***mute*** is cancelled by pressing the button again.

SW2



OFF ↔ ON

Individual Functions DIP SW2 (5-8)

SW2-5	Master / Slave	Which videophone to set
*Off	Master	Only or first videophone per BSC4 output.
On	Slave / extension	Second and subsequent videophones per BSC4 output.
SW2-6	Auto Display on Ring	Videophone display behaviour
*Off	Display during ring	Picture is on while ringing, stays on when answered.
On	No display during ring	Picture is off while ringing, comes on when answered.
SW2-7	Mute Function	Action of muted videophone
*Off	Ringer mute only	Videophone indicates ring by flashing the <i>view</i> symbol, picture comes on if SW2-6 is off, no sound.
On	Disable videophone	Videophone does not respond to a call.
SW2-8	Video Terminator	Which videophone has the setting
Off	No termination	Any videophone not at the end of the cable.
*On	Terminated	The videophone at the end of the cable.

*Default setting

Troubleshooting

Common Faults

A very high percentage of calls to our technical support number, regarding new installations, are resolved to faulty wiring. The reasons for these are various: -

Broken cores, especially short links, sometimes broken inside the insulation!

Connectors clamped onto the insulation instead of copper.

Wire in the wrong side of a rising clamp connection, the clamps need to be unscrewed far enough to stop the wire going “underneath”.

Shorts or opens due to cables having been stapled or nailed through.

A common fault is wiring a connector left to right instead of right to left, or one or more twisted pairs the wrong way round.

Tip. The heads of screws on connectors are not a reliable means of making a connection with a meter, try pushing the probe into the wire entry point.

Quick Fault Reference

These tables provide a quick indication of the possible fault.

Power Problems	
Apartment station resetting (The three indicators lights show the power on sequence).	<ul style="list-style-type: none"> • Power supply intermittent short or overload. • More than 1 extension enabled for auto display. • Lock output short-circuit; see ‘Lock Problems’
28V LED does not light on controller.	<ul style="list-style-type: none"> • Temporarily remove connection to 28V+ output. If it now comes on there is a short on the apartment station wiring. • 12V input connections are reversed.
PS4 output voltage fluctuating, meter reading unstable.	<ul style="list-style-type: none"> • Output overload is causing current limit to operate, check grouping of controllers to power supplies, see page 11 for details • See Lock Problems below

Call Problems	
Apartment station does not ring or flash when called	<ul style="list-style-type: none"> • No power to apartment station; check that red lamp illuminates when mute is touched. • Data wiring has a fault, Data A or Data B connection broken. • 0V to controller missing on separately powered apartment station. • Pushbutton wiring error, try short length at controller.
No extension apartment station rings or flashes when called	<ul style="list-style-type: none"> • Data wiring has a fault, Data A or Data B connection broken.
Green Lock light on apartment station flashes once when called	<ul style="list-style-type: none"> • Apartment station set to slave with no master present or responding.

BF Apartment Station 2-72 Way System

BSC4 Video Controller Tests

When the system is idle (no calls in progress) pressing the 'Test' button activates the 'Audio On', 'Status' and one of the 'Select n' LED's for 3S. If the system is not idle (Version 2 only) pressing the 'Test' button will cause a system wide reset.

There are 4 green LED's which indicate power to the individual apartment stations, on board fuses will operate if a short exists.

The BSC4 also has 4 'Phone' test buttons which can be used to verify the 'data' connection to the apartment station. Pressing the 'Test Phone n' button should cause the apartment station and extensions, if any, to ring and the associated 'Select n' Led to light.

Touching **pickup** or touching **view** will cause the 'Audio On' and 'Select n' LED's to light. There will be no audio as no door panel is active. The display on the apartment station will light up to grey or blue unless the video camera is directly wired to the BSC4 input.

Touching **pickup** again will cause all the LED's to extinguish. Touching the **lock** symbol instead will cause the 'Status' LED to light and after 3S all the LED's will go off.

If this sequence works repeatedly then the A and B data connections are probably OK. and the +28V and 0V must also be OK. The test also shows that the BSC4 software is running and diagnostics can now focus on the door controller to video controller wiring.

If it fails an apartment station can be connected locally with a short cable to eliminate the cable being faulty.

Lock Release Problems	
Lock release does not operate or clicks but does not open.	<ul style="list-style-type: none">• Connections to Lock Release are open or shorted.• Voltage drop due to cable too thin.• Lock current is too high; Power supply is resetting.• Lock release jammed due to over tight fitting.
Maglock does not hold strongly.	<ul style="list-style-type: none">• Voltage drop due to cable too thin.
TEST: Press 'Test' Button on Door Controller (when system idle):	<ul style="list-style-type: none">• Confirm 'LOCK' LED illuminates for 3 seconds.• Check Output Voltage at LOCK terminals.
Lock release operates all the time or in reverse.	<ul style="list-style-type: none">• Check fail safe/fail secure SW2-4 selection matches the lock type.• Normally closed switch has been used for exit button.
Lock operates from the exit button but not the test button or apartment station.	<ul style="list-style-type: none">• Normally closed switch has been used for exit button.

BF Apartment Station 2-72 Way System

Video Problems	
Blank picture when: - Calling apartment station or touching view	<ul style="list-style-type: none"> • Broken or missing Video + or Video - connection. • Cameras incorrectly configured refer to SW2-6 settings on page 21 • Call is from an audio only panel.
No picture when calling apartment station	<ul style="list-style-type: none"> • Check auto display switch is on. See page 25
No picture when touching view	<ul style="list-style-type: none"> • CCTV not available on multi-way systems.
Touching view locks up system	<ul style="list-style-type: none"> • Ensure BFD8/72 SW2-8 is OFF
Repeated touching of view does not select cameras in sequence as expected.	<ul style="list-style-type: none"> • Check SW2-6 at all entrances is set for correct number of cameras at that entrance • Check settings for SW3 if SW2-7 is enabled • See section 'Global View' on page 22
Unstable picture	<ul style="list-style-type: none"> • Power supply voltage low. • Terminator switch not set on last apartment station. • Too many terminator switches set on. • Video gain jumper set to high on a short run. • Very bright area in background upsetting camera.
Unstable picture possibly with areas looking like a photographic negative.	<ul style="list-style-type: none"> • Video + and Video - reversed, or M and S reversed.
Entrance cannot be seen at night	<ul style="list-style-type: none"> • Power not connected to camera IR night illumination. Connect 1 to + on camera.

Speech Problems	
Loud tone at the entrance speaker. (Acoustic feedback)	<ul style="list-style-type: none"> • Broken Audio 1 or Audio 2 connection. • Intermittent or broken Data A or Data B connection. • Apartment station has reset; see the power faults table.
No speech from apartment station to entrance	<ul style="list-style-type: none"> • Missing or Broken Spkr + or Spkr - connection.
No speech from entrance to apartment station	<ul style="list-style-type: none"> • Missing or Broken PM + or PM - connection.

Specifications

BSD8/72 Door controller	
Size	BSD8: 185mm x 230mm x 42mm BSD72: 360mm x 240mm x 40mm
Supply Voltage	10.8V min, 13.8V typical, 15V max
Current Consumption	80mA idle @13.8V, 250mA active includes speech not cameras

Model C-CAMBS Colour Camera	
Size	60mm x 57mm x 31mm
Supply Voltage	10V d.c. minimum, 15V d.c. maximum
Current consumption	175mA maximum without IR 215mA maximum with IR (Link 1 to +)
Image Device	1/3" CCD
Sensitivity	0.01 lux, auto switching to B/W in low light levels
Minimum Focus	100mm
Viewing Angle	92° (typical)
Video Output	PAL composite video 1Vpk-pk (75 Ohm)
Resolution	More than 330 lines
Back light compensation	Yes

BSC4 Video Controller	
Size	185mm x 230mm x 42mm
Supply Voltage	10.8V min, 13.8V typical, 15V max
Current Consumption	350mA idle, 3A max @13.8V

BF Colour Apartment Station	
Size	210mm x 260mm x 60mm
Fixing	Wall Mounted
Supply Voltage	11V minimum – local power supply only. 20V to 28V typical
Current Consumption	25mA @28V idle, 375mA @ 11V active
Buzzer Mute Time	Disabled, 1minute through 10 hours, indefinite

BS Colour Videophone	
Size	210mm x 260mm x 60mm
Fixing	Wall Mounted
Supply Voltage	11V minimum – local power supply only. 20V to 28V typical
Current Consumption	25mA @28V idle, 375mA @ 11V active
Buzzer Mute Time	Disabled, 1minute through 10 hours, indefinite

BF Apartment Station 2-72 Way System

Model BSA Phone	
Size	235mm x 105mm x 25mm
Supply Voltage	10V d.c. minimum, 30V d.c. maximum
Current consumption	20mA idle, 67mA ringing @13.8V

Model BF-AMP Speech Unit	
Size	98mm x 60mm x 24mm
Supply Voltage	10V d.c. minimum, 15V d.c. maximum
Current consumption	100mA d.c. maximum

PS4 Power Supply	
Size	236mm x 105mm x 81mm
Output Voltage (regulated)	13.5V d.c. min, 13.8V d.c. nom, 14.1V d.c. max
Output Current	3A continuous, 4A peak (5 minutes max)
Mains Supply Internal Fuse	Not user replaceable
Supply Voltage	230V 50Hz nominal
Temperature Range	0 °C to 50 °C

340C Power Supply	
Size	140mm x 60mm x 53mm
Output Voltage (regulated)	13.5V Min, 13.8V Nom, 14.1V Max
Output Current	1A continuous, 1.5A peak (5 minutes max)
Mains Supply Internal Fuse	Not user replaceable
Supply Voltage	230V 50Hz nominal
Temperature Range	0 °C to 50 °C

840 Power Supply – Battery Backed	
Size	350mm x 330mm x 80mm
Output Voltage (regulated)	13.5V Min, 13.8V Nom, 14.1V Max
Output Current	3A continuous, 4A peak (5 minutes max)
Mains Supply Internal Fuse	T2A 20mm HBC (HRC) Ceramic
Battery Fuse	F4A 20mm Glass
Supply Voltage	230V 50Hz nominal
Temperature Range	0 °C to 50 °C

BSSW Gate Switcher / Block Isolator	
Size	185mm x 230mm x 42mm
Supply Voltage	10.8V min, 13.8V typical, 15V max
Current Consumption	80mA idle, 210mA max @13.8V

Diagram A – 2-72 Way Basic System Wiring Overview

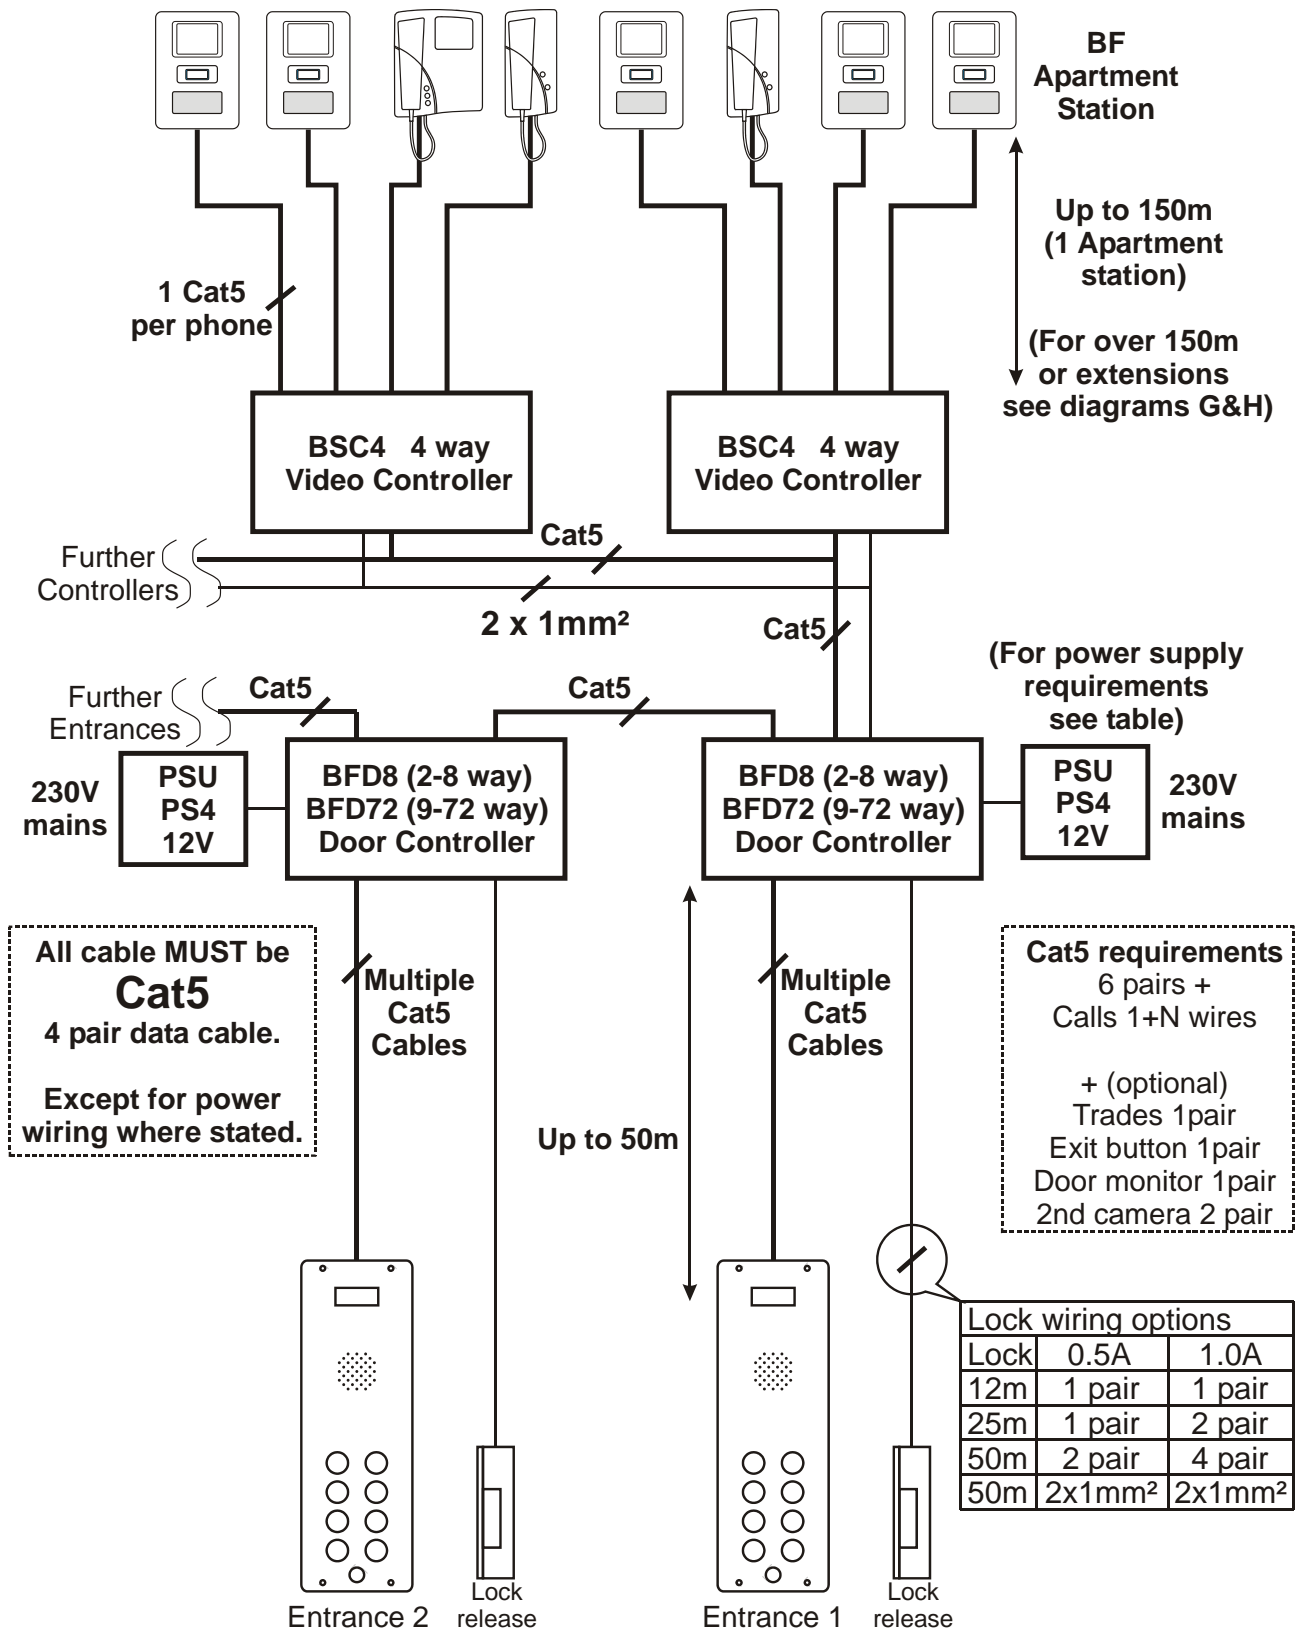


Diagram B – BFD8 PCB Detail

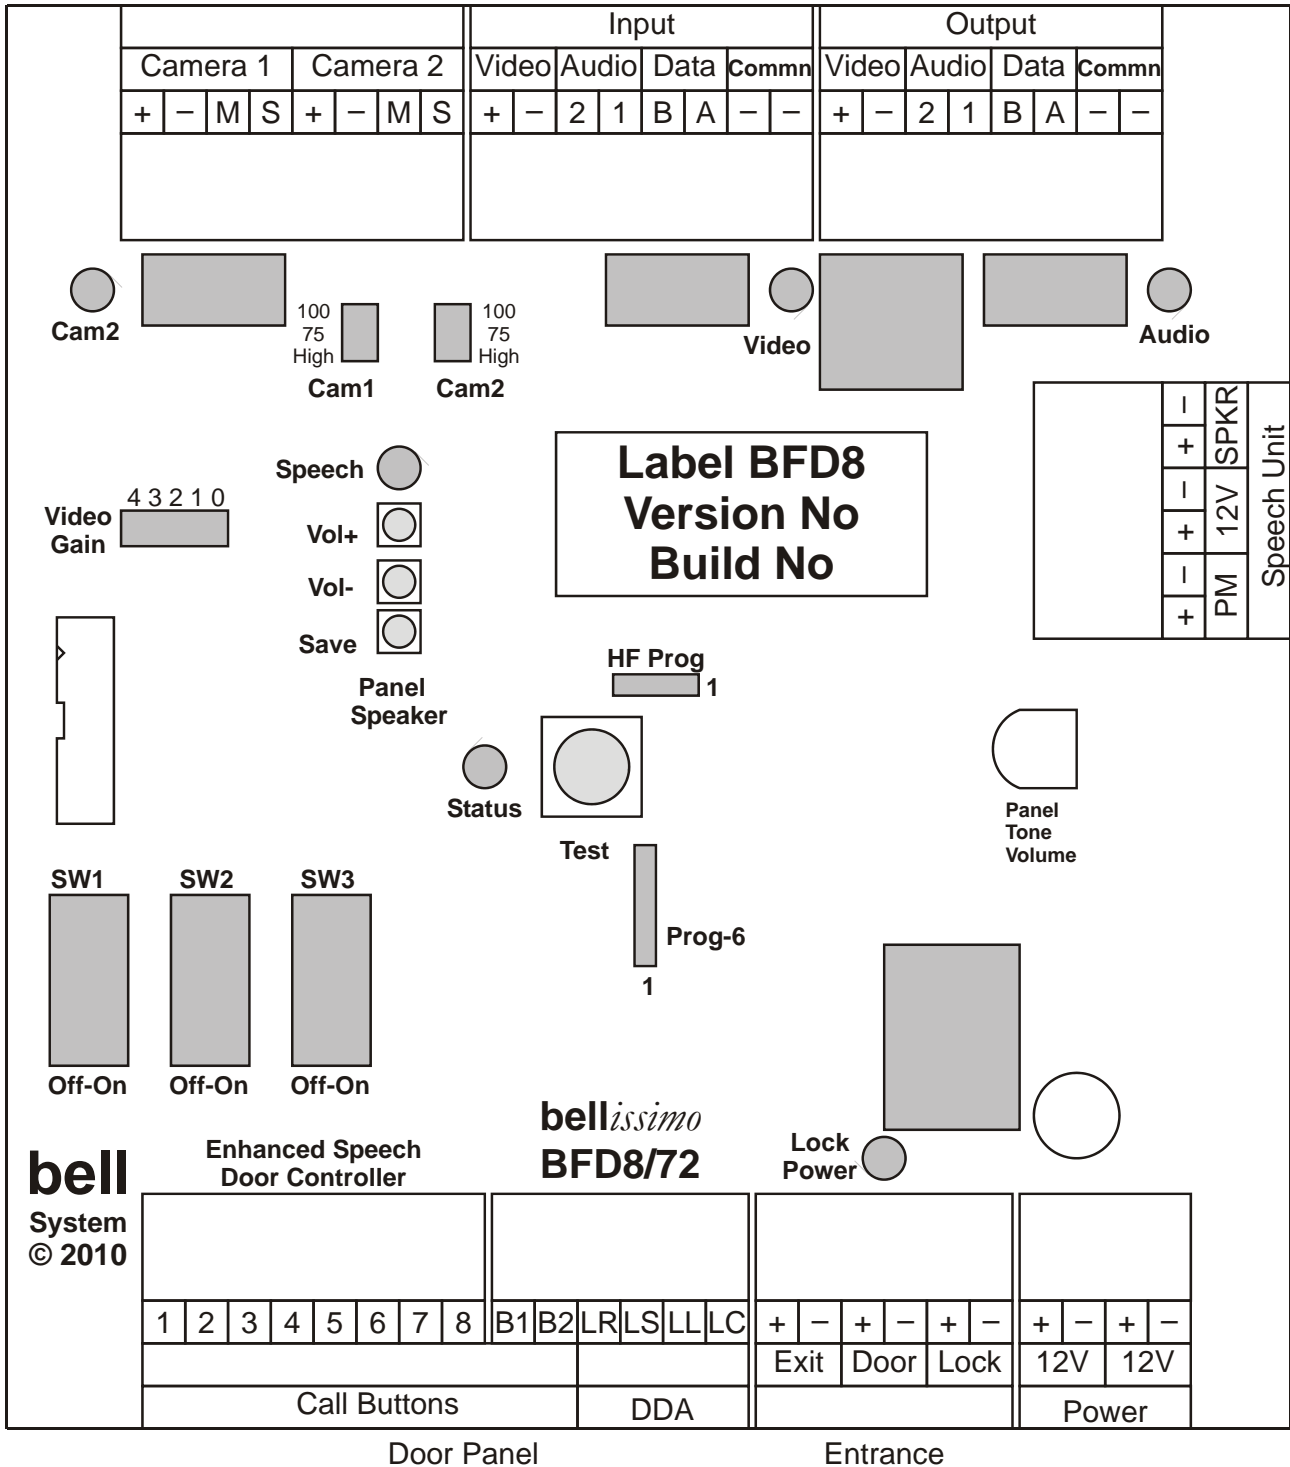


Diagram C – 2-72 Way Basic System Wiring Detail

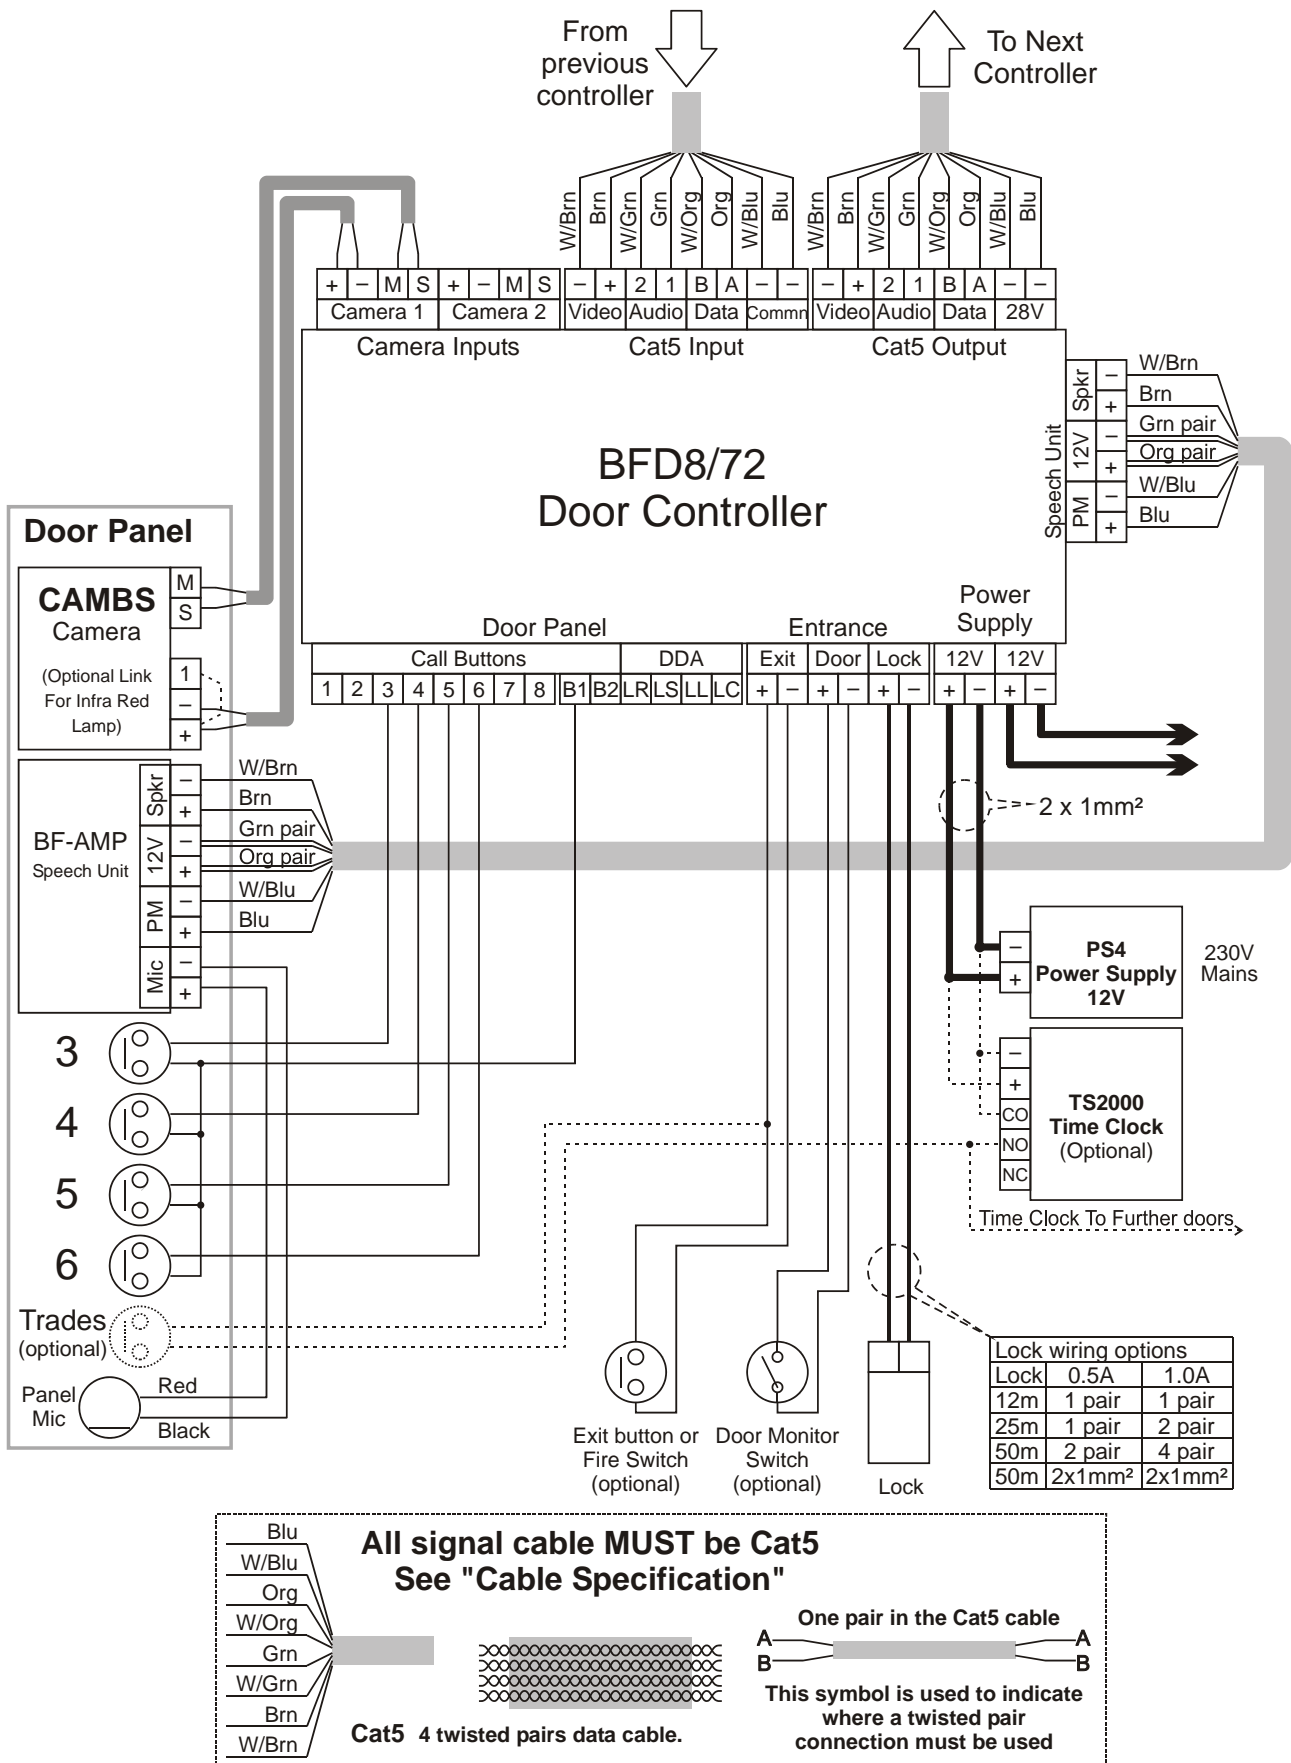


Diagram D – BSC4 PCB Detail

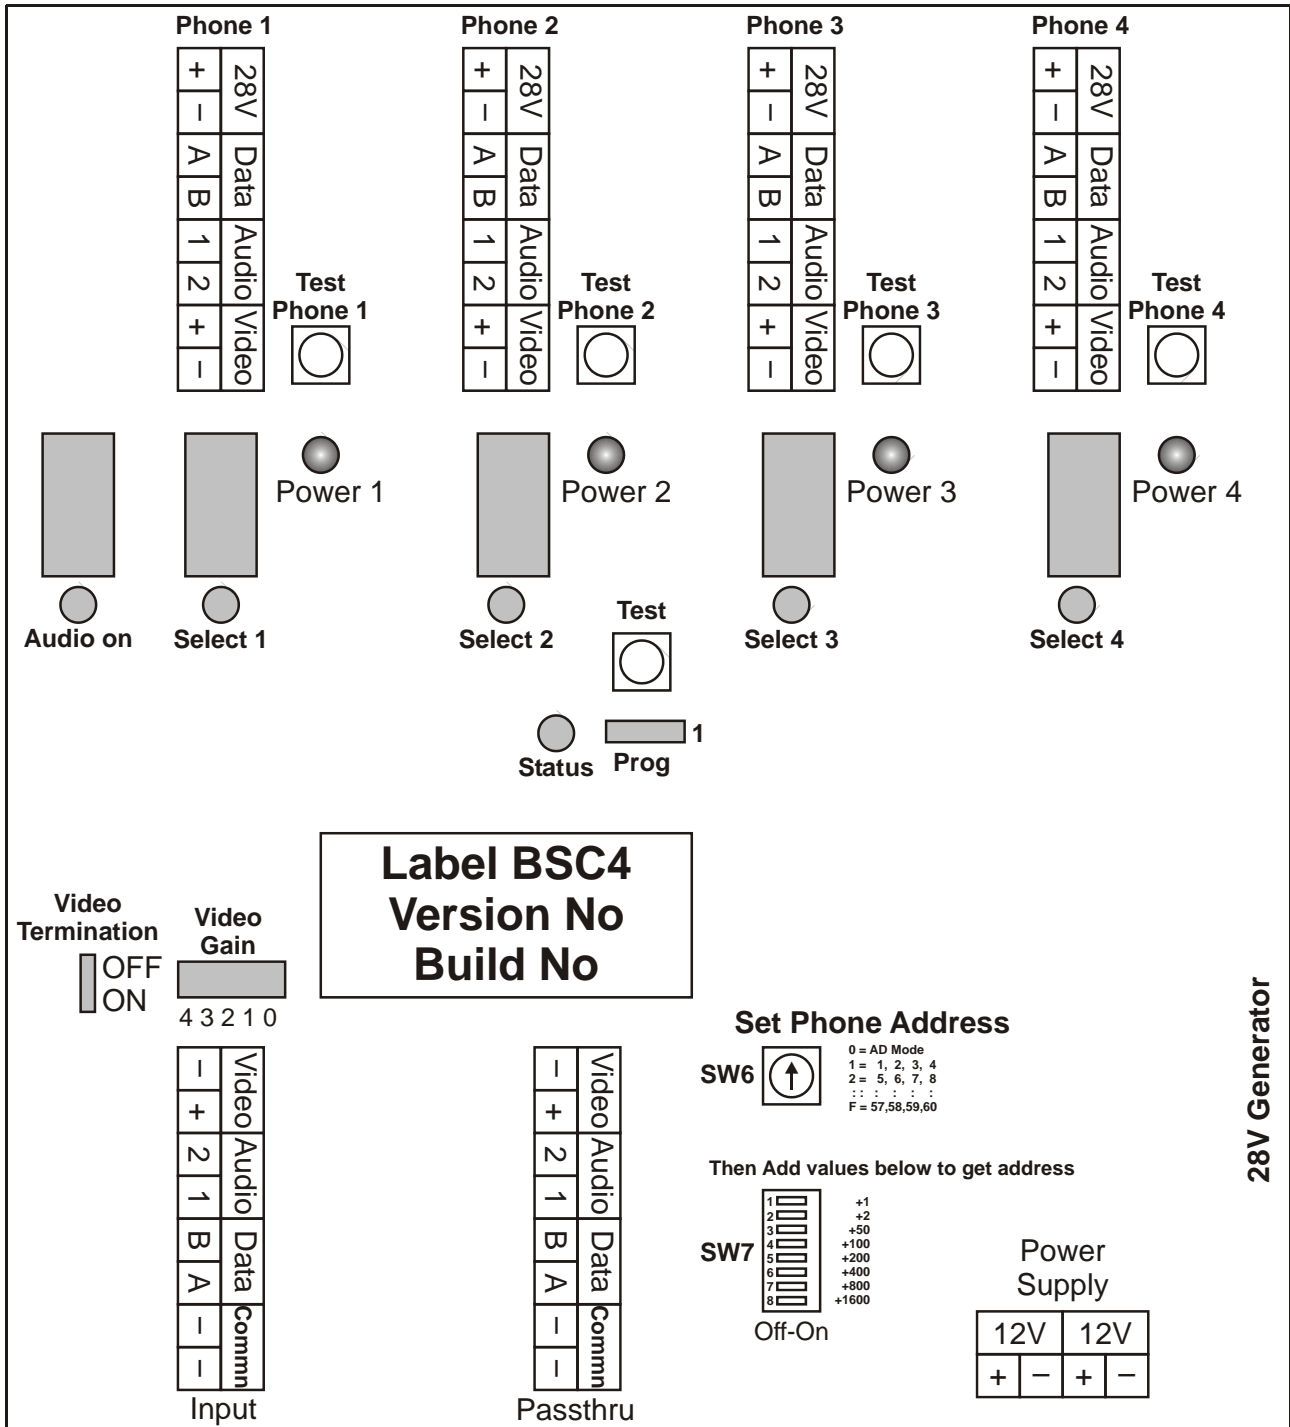


Diagram E – BSC4 Wiring Detail

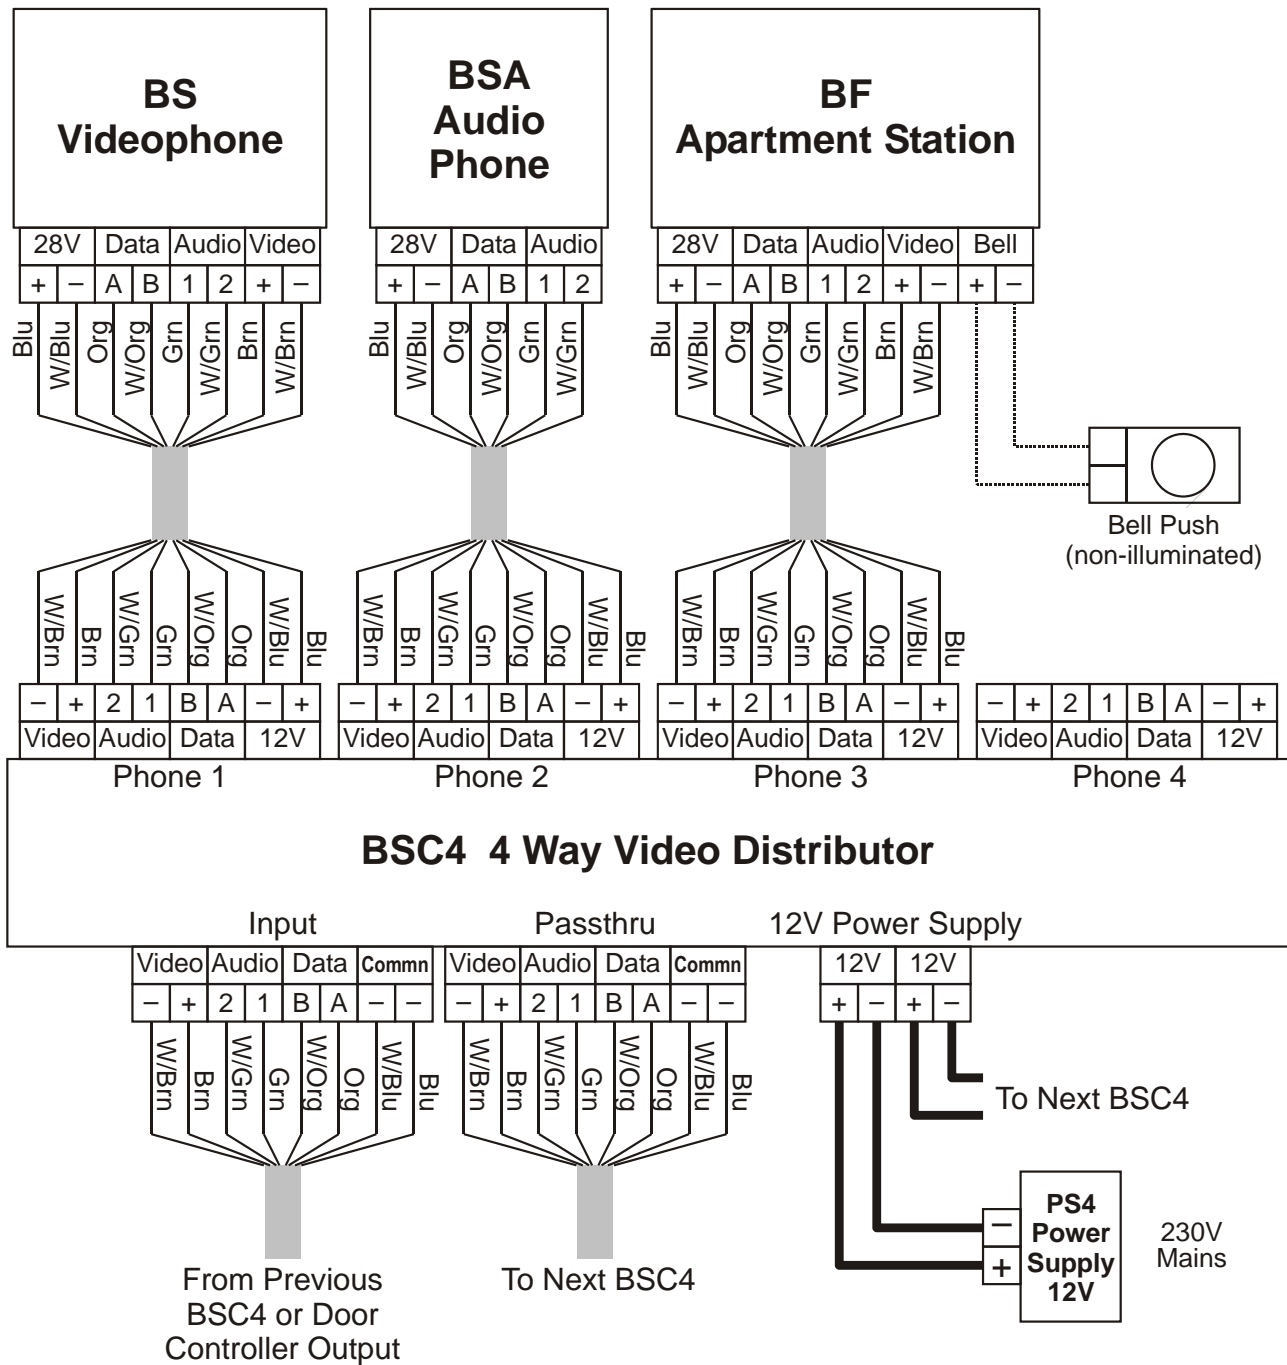


Diagram F – Large system Overview

Illustration of Power Supply Distribution



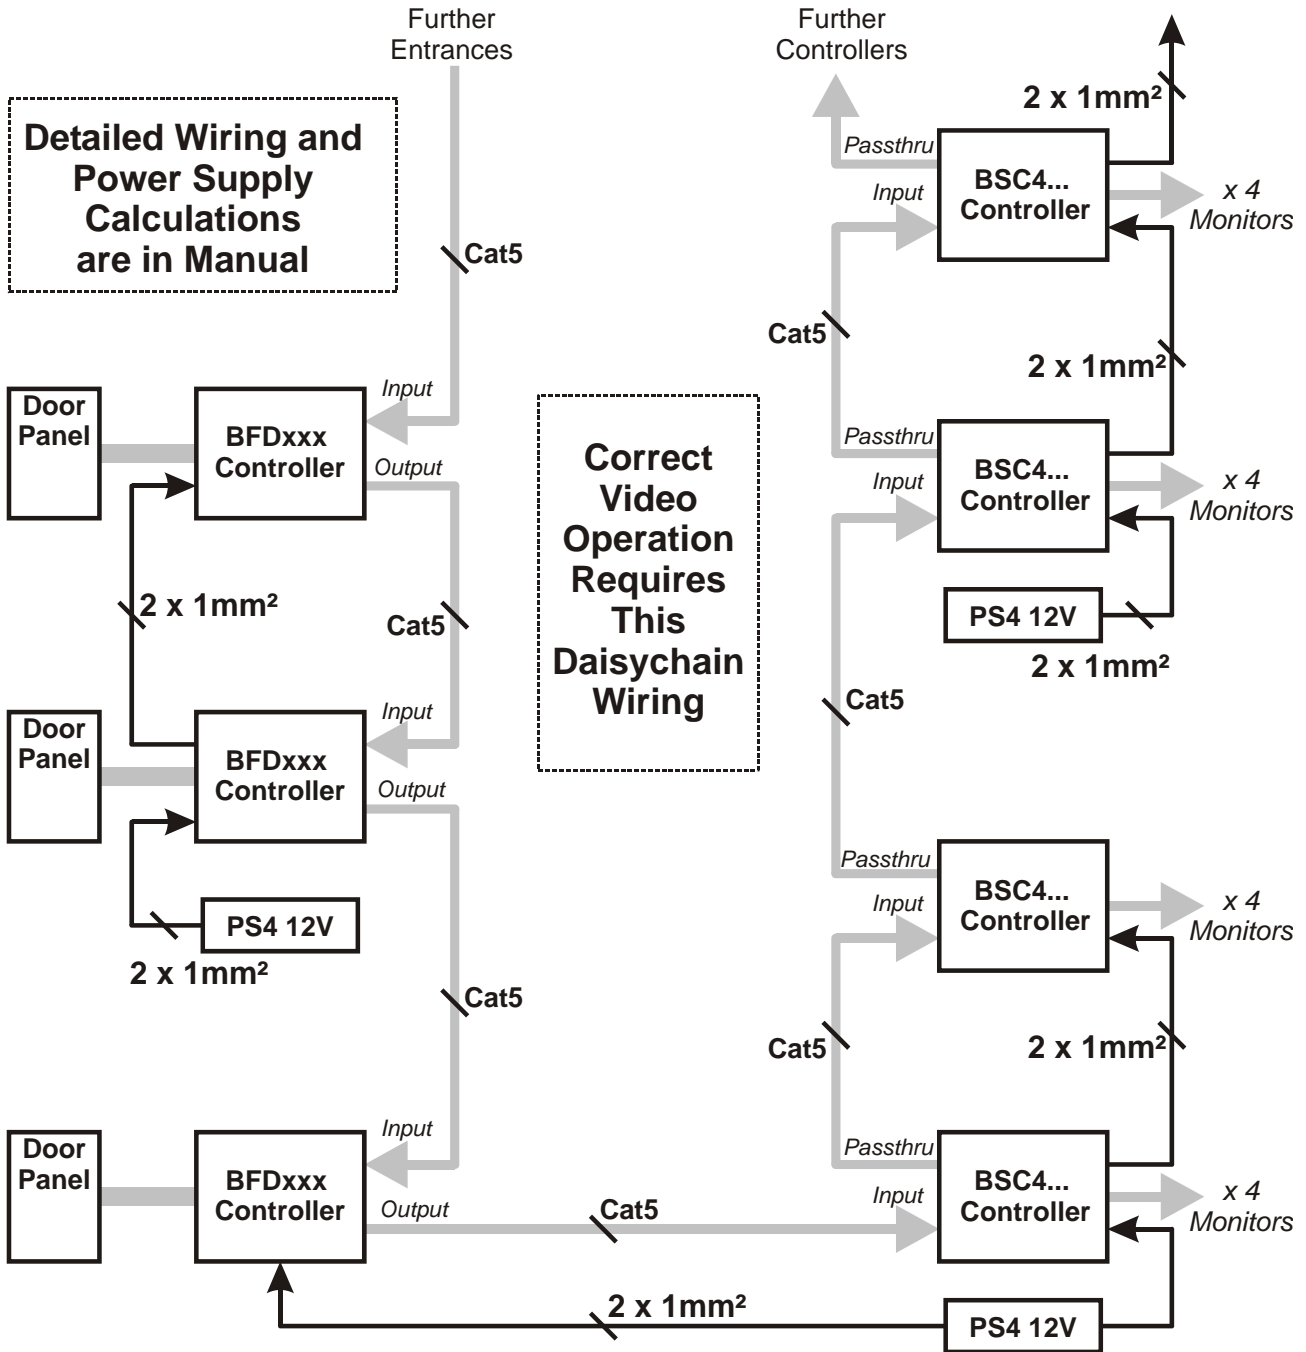


Diagram G – Extension Apartment station Wiring

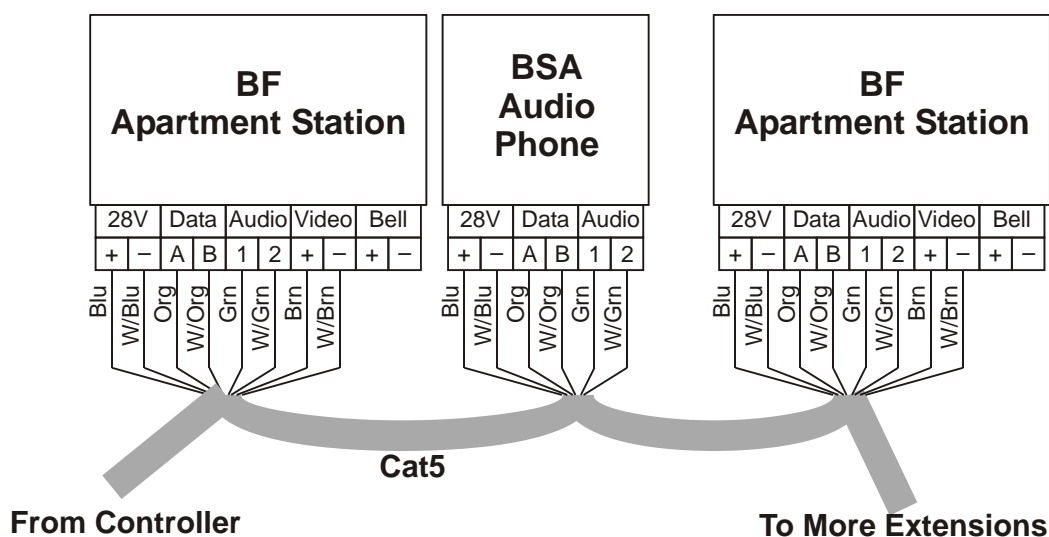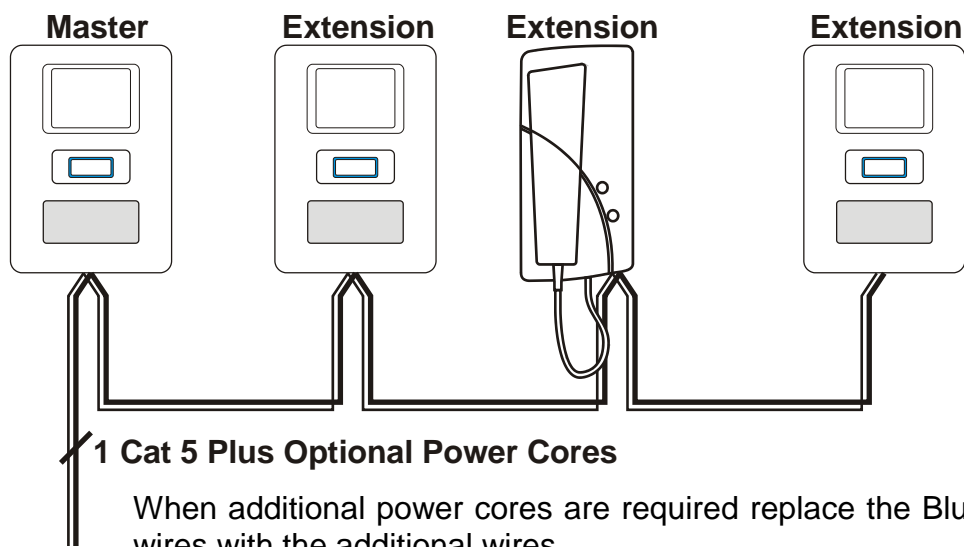


Note. For each cable run :-

- Only one unit must be Master (Recommend the first unit)
- Auto display on one video unit only (For auto display on multiple video units see next Diagram)
- Extension video units must be "daisy chain" wired to preserve video quality
- The last (or only) video unit on the cable requires the Video Terminator "ON" all other video units must have the Video Terminator "OFF"

Diagram H – Apartment station Local Power Wiring

Where more than one extension video unit is required to provide "auto display" then additional power supplies will be required

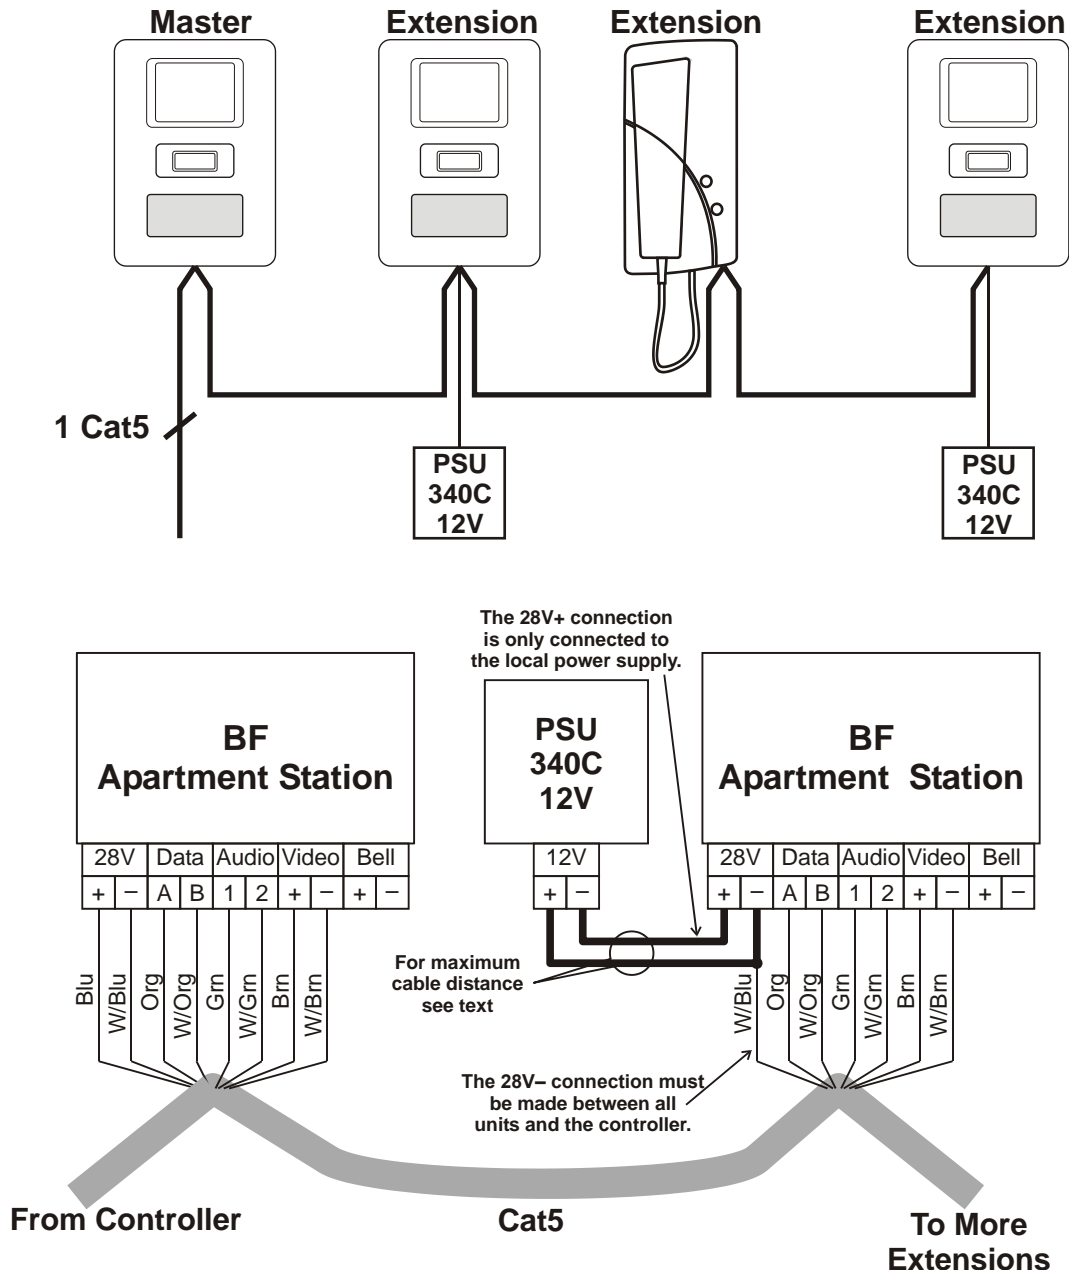


Note. For each cable run :-

- Only one unit must be Master (Recommend the first unit)
- Extension video units must be "daisy chain" wired to preserve video quality
- The last (or only) video unit on the cable requires the Video Terminator "ON" all other video units must have the Video Terminator "OFF"

Diagram I – Camera Sharing & Time Clock Sharing

Camera Termination Options

Cameras may be wired in either twisted pair or coax and shared with other equipment.

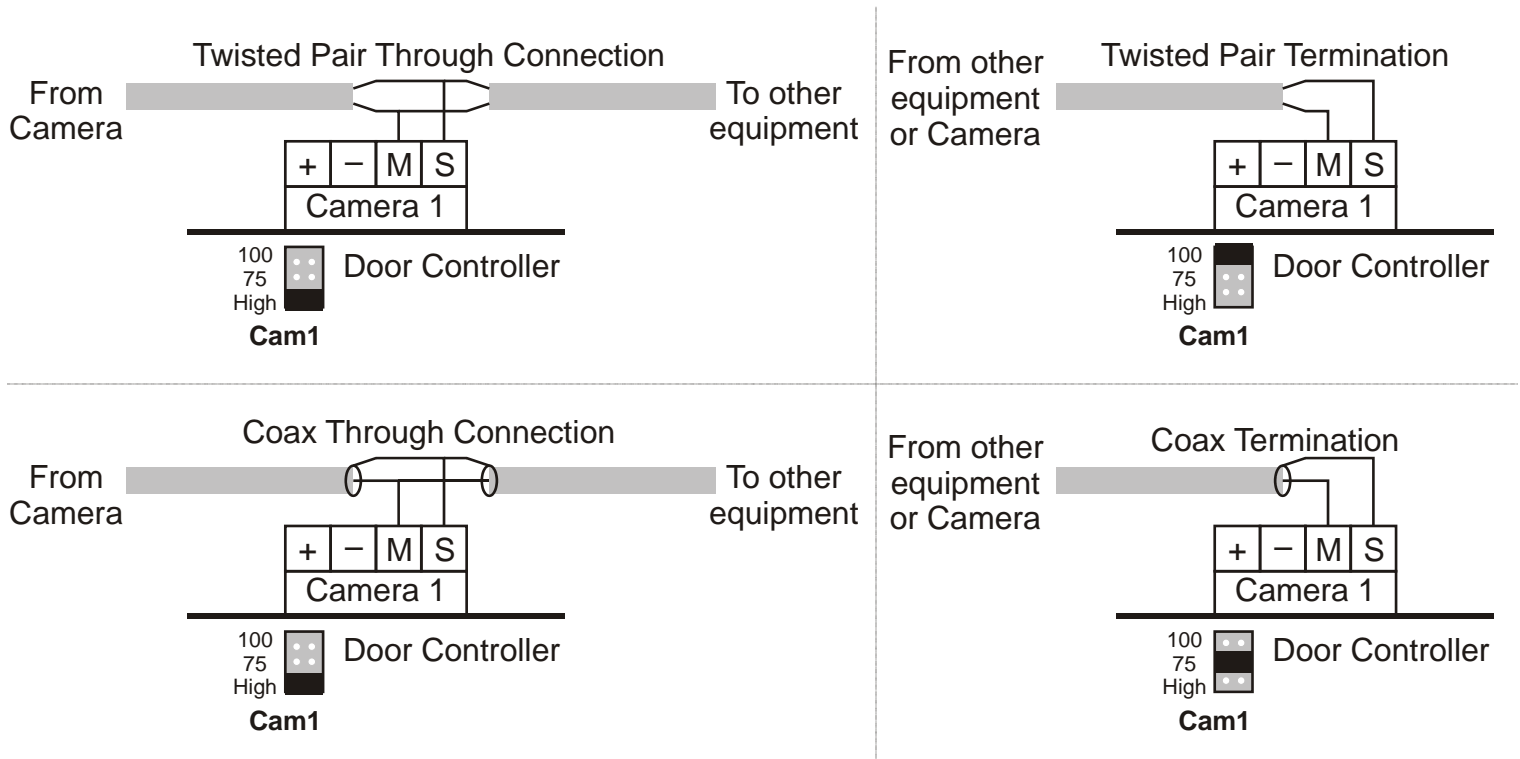

Time Clock Sharing

A time clock can be shared between distributed equipment areas by borrowing one of the 'comm -' wires in the interconnecting Cat5 to use as the shared "Time clock common".

The "Time clock common" signal is sharable across all Bell controller types.

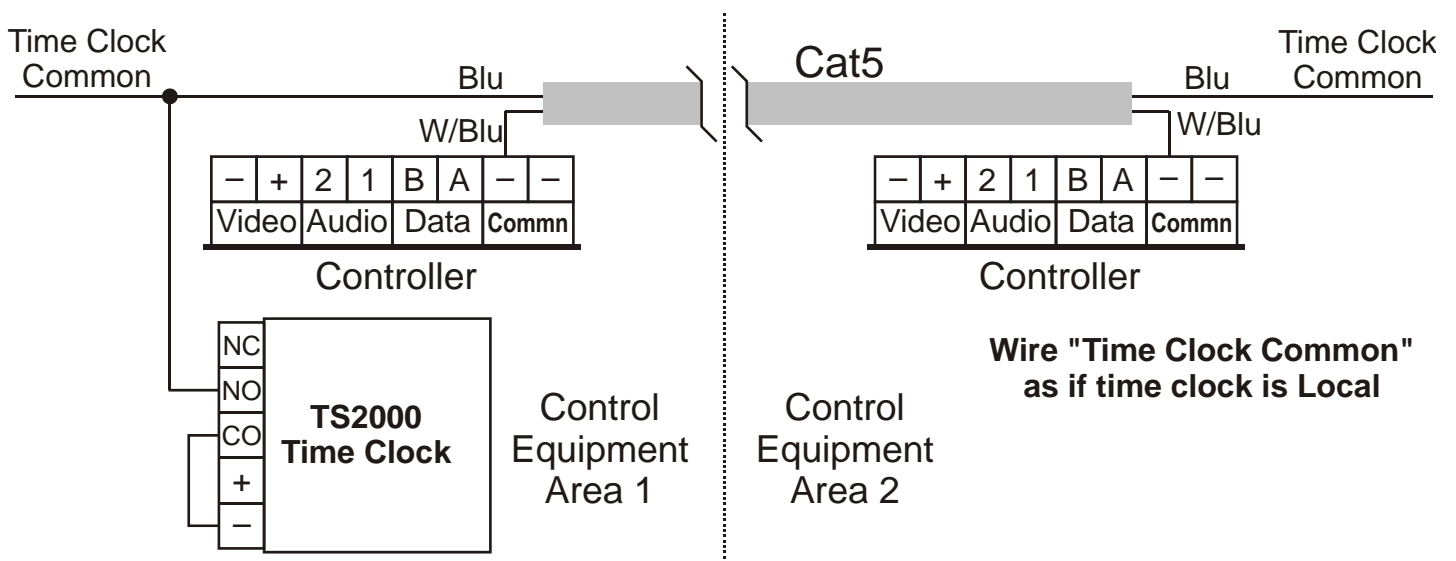


Diagram J – 2-72 Way Additional DDA Wiring


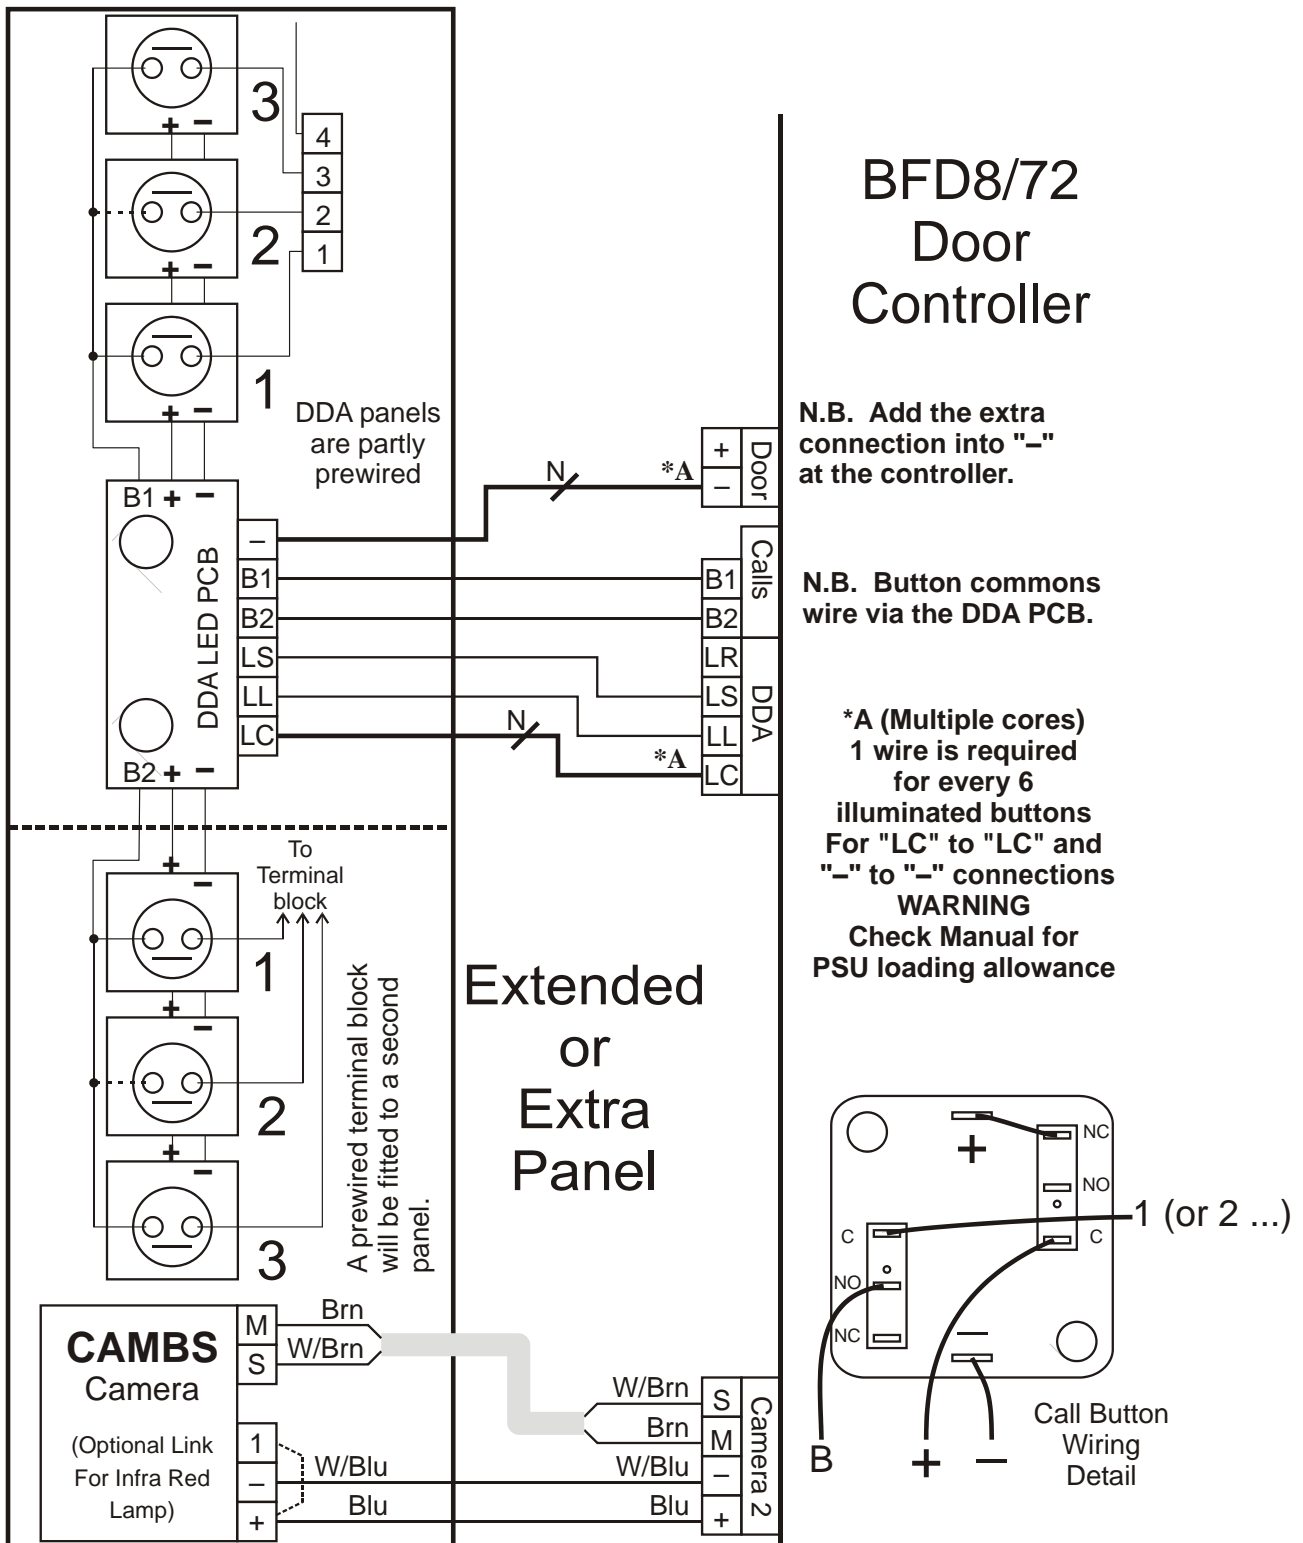


Diagram K – Combined Connections bell*free* With Lock

Connecting a Bell PAX1 Proximity Reader

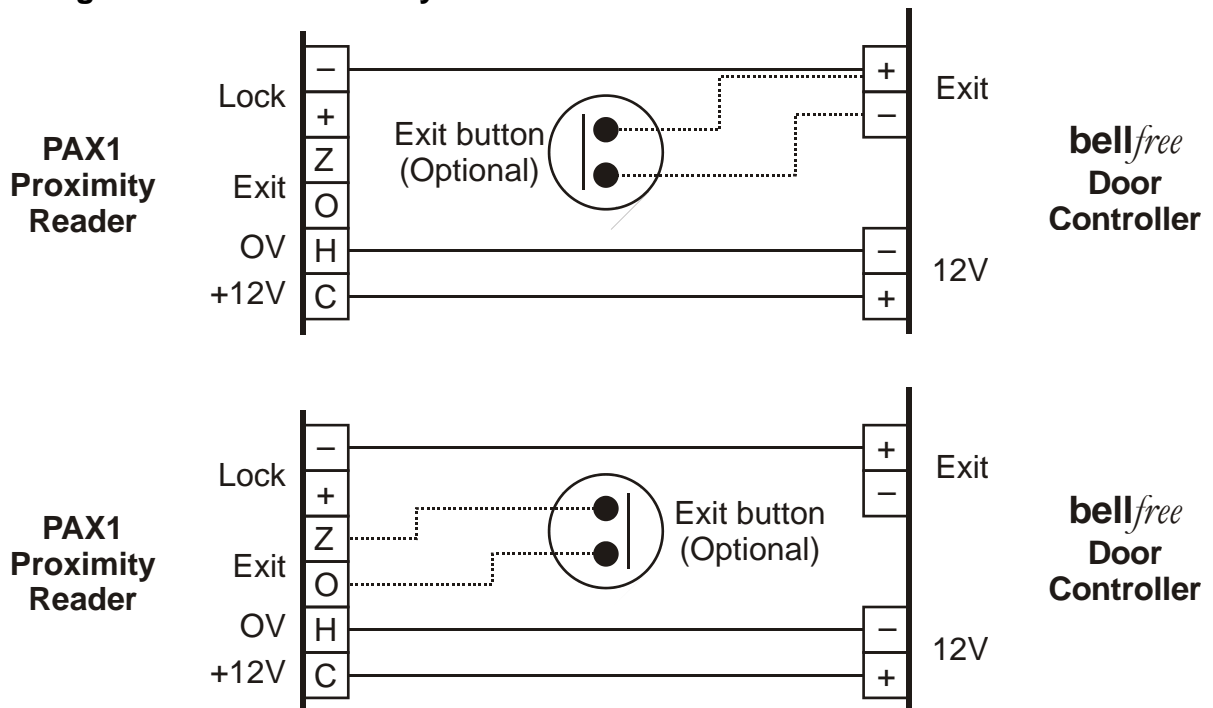


Connect the lock release as per this manual. Leave the Proximity Reader set to fail secure, the BFD controller sets the lock type.

Use a lock time card to reduce the lock time to 1 or 2 seconds, otherwise the PAX1 will extend the bell*free* lock time to 7 seconds. Lock time cards are in all Fob packs except the starter pack.

Note 1. A normally open exit button can still be wired to the BFD controller in addition to the proximity wiring. Alternatively the exit button can be wired to the proximity reader

ACT 1000/2000/3000 Proximity Controller or 100e/200e Extender

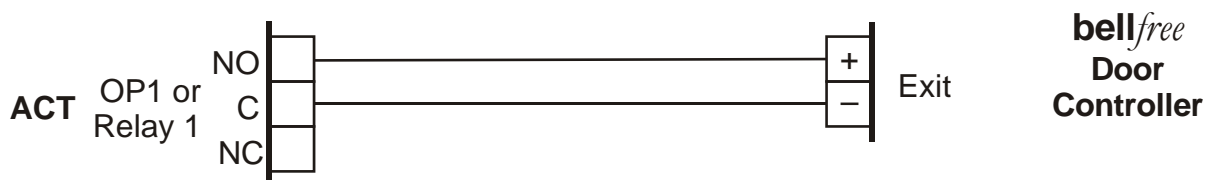


The lock output on an ACT controller is a volt free relay contact, so as long as it is not used for another purpose it can be directly connected to the exit input of a bell*free* door controller.

A 2 wire interface is shown, but if a common 12V supply is in use then the Exit-input may be left unconnected and the corresponding ACT relay connection can be connected to a local 0V terminal.

Diagram K – Continued

Connecting a Bellcode Coded Access Controller

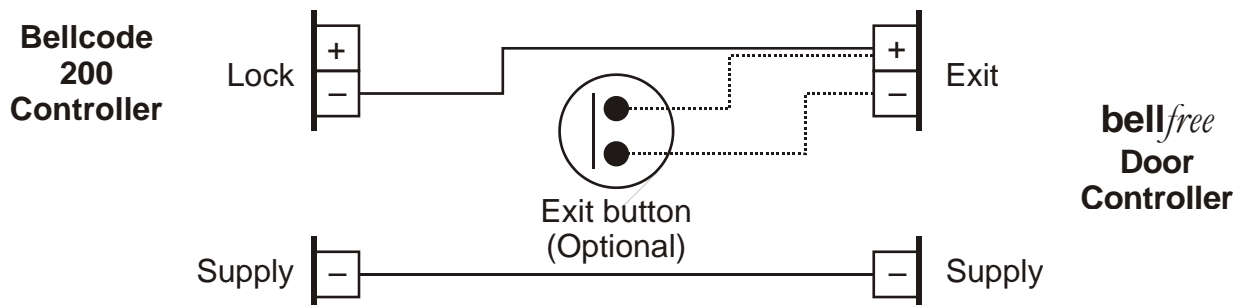


Connect the lock release as per this manual. Leave the Bellcode controller set to fail secure, the BFD controller sets the lock type.

See "Bellcode Manual inc CK200 CS109 (PD-078)" for the other installation and setting instructions.

- Note 1. A normally open exit button can still be wired to the Bellcode unit in addition to the bellfree wiring.
- Note 2. A "12V-" connection will be required if the 2 units are not sharing a power supply.

Taking an Output From a Third Party System

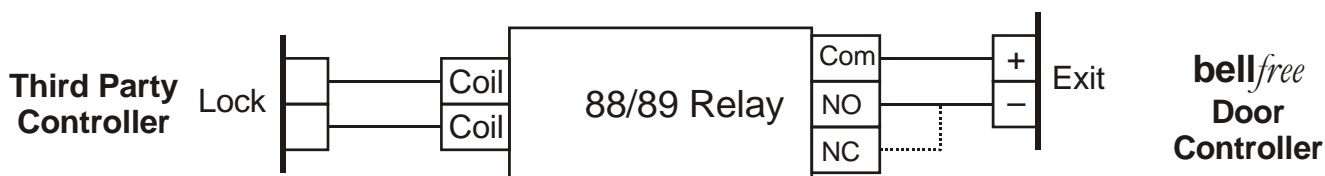


For 12V a.c. systems use an 88 relay and for 12 d.c. systems use an 89 relay. For systems with other lock voltages, a relay with a suitably rated coil will be required.

For systems with a fail safe output the common and normally closed contacts will be required.

Diagram L – Combined Connections Third Party Lock


Connecting a Bell PAX1 Proximity Reader

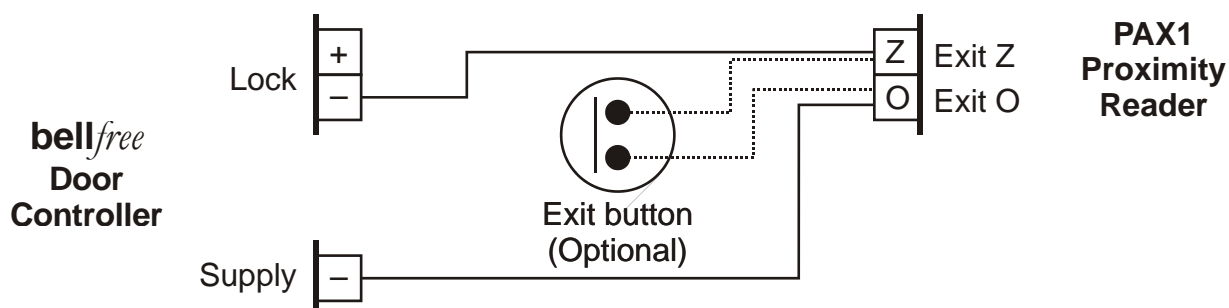

The bellfree door controller is set to fail secure. The diagram assumes a common power supply, if not an extra wire will be required to connect the PAX1 Exit O to the bellfree 12V-.

N.B. The power wiring to the PAX1 must be able to carry the lock current with less than 2V voltage drop.

ACT 1000/2000/3000 Proximity Controller or 100e/200e Extender

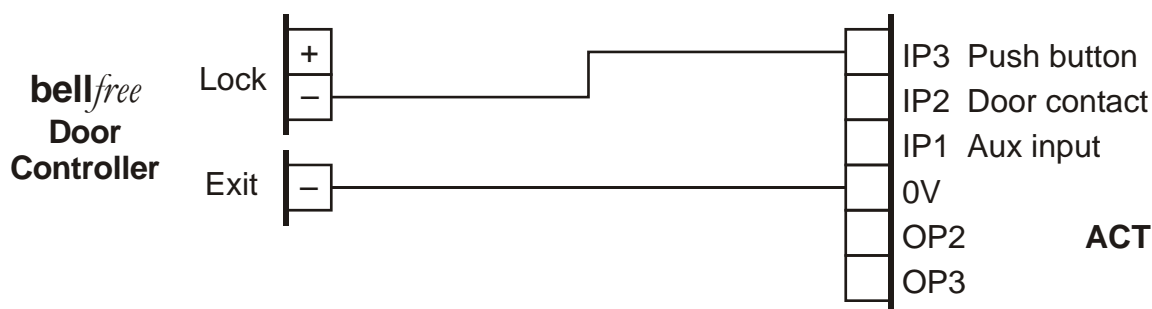


Notes

1. Connect the lock release or Maglock using the ACT Manuals.
2. Leave the bellfree controller set to Fail Secure regardless of the type of release used.
3. A normally open exit button can still be fitted to the ACT controller in addition to the bellfree wiring.
4. If the 2 units are not sharing a power supply, then a connection from bellfree controller Exit- to ACT 0V will be required.
5. Look for the notes on the ACT installation diagram concerning the use of links when the door contact is not used and when a power supply without power fail is not used.

Diagram L – Continued


Connecting a Bellcode Coded Access Controller

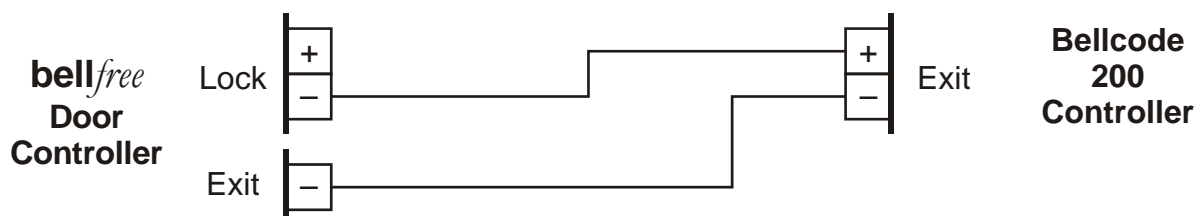

The bellfree door controller is set to fail secure.

The Exit- to Exit- wire is only needed if the two units do not share a common power supply.

Opening a Gate or Locks on Third Party Systems

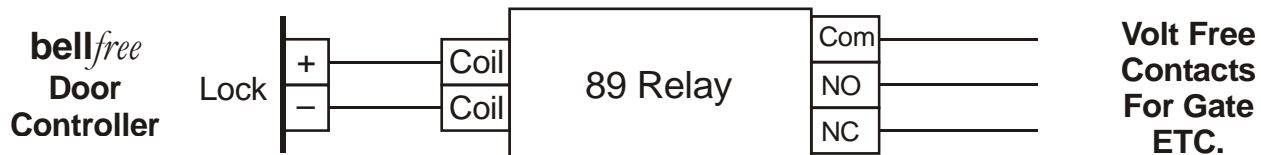

The bellfree door controller is set to fail secure.

Use COM and NO or COM and NC as required for the gate controller or third party access system.

Safety Information and Declarations

Connections to the 240VAC mains supply must be carried out by a qualified electrician or similar competent person, and made in accordance with current legislative requirements. A two-pole switch (as provided by a Consumer Unit or Switch-Fuse) must be included to isolate both Live and Neutral during Installation or Maintenance. The circuit must be protected by a fuse or other current-limiting device, rated according to the capacity of the cable used, up to a maximum of 10A. Use only mains cable to BS6004 or equivalent, within the following specified limits:

	Min	Max
Conductor Diameter	1.0mm (0.8mm ²)	2.25mm (4mm ²)
Cable Diameter	4.0mm	8.0mm

Model 840 Power Supply (with battery standby)

The Model 840 power supply must be placed in a protected indoor environment such as an electrical cupboard. It must be secured to the wall with adequate fixings so that there is no possibility of it falling. The lead-acid battery for the standby power supply is shipped in separate packaging. It should only be connected once the system has been fully tested. Connection is made by 2 leads with spade terminals; observe the correct polarity – red to positive, black to negative. Care must be taken to ensure that the terminals of the battery are not shorted together by metal objects, as this may constitute a Fire Hazard. The Control Cabinet is IP55 rated (to exclude dust) and is vented to avoid the build-up of gases. Do not block any vents that may be apparent.

A good mains safety earth must be connected to the cabinet housing the power supply

Where the power supply is fitted with a replaceable internal mains fuse and or battery fuse, always replace with the same type as indicated on the power supply. The fuse must be approved to BS EN 60127 or equivalent.

Power Supply Model	Mains Fuse (Time Delay)	Battery Fuse (Quick Blow)
840	T2A 20mm HBC (HRC) Ceramic	F4A 20mm Glass

Model PS4 and 340C Power Supplies

These power supplies must be wall-mounted onto plasterboard, or a similar non-conductive material, in a protected indoor environment such as an electrical cupboard.

When fitting the power supply cable (both mains and low voltage) ensure the cable entry cut-outs in the enclosure lid are no larger than necessary for the cable diameter used and under no circumstances must they be taken beyond the outer cut-out zones.

Bell System (Telephones) Ltd.

Presley Way,
Crown Hill,
Milton Keynes
MK8 0ET.

Tel: 01908 261106 (Sales and Technical Support)

FAX: 01908 261116

OR

Local rate numbers

Tel: 0845 121 4008 (Sales and Technical Support)

FAX: 0845 121 4009

E-mail: sales@bellsystem.co.uk

technical@bellsystem.co.uk

Website: www.bellsystem.co.uk

Standards

This product complies with European directive 89/336/EEC on
Electromagnetic Compatibility and Low Voltage Directive 72/23/EEC.

Emissions: Generic BSEN 61000-6-3

Immunity: Generic BSEN 61000-6-1

Low Voltage: Generic BSEN 60950



bell
system
(Telephones) Ltd



BS EN ISO 9001:2008 Certificate number GB2000389