


Handy User Guide

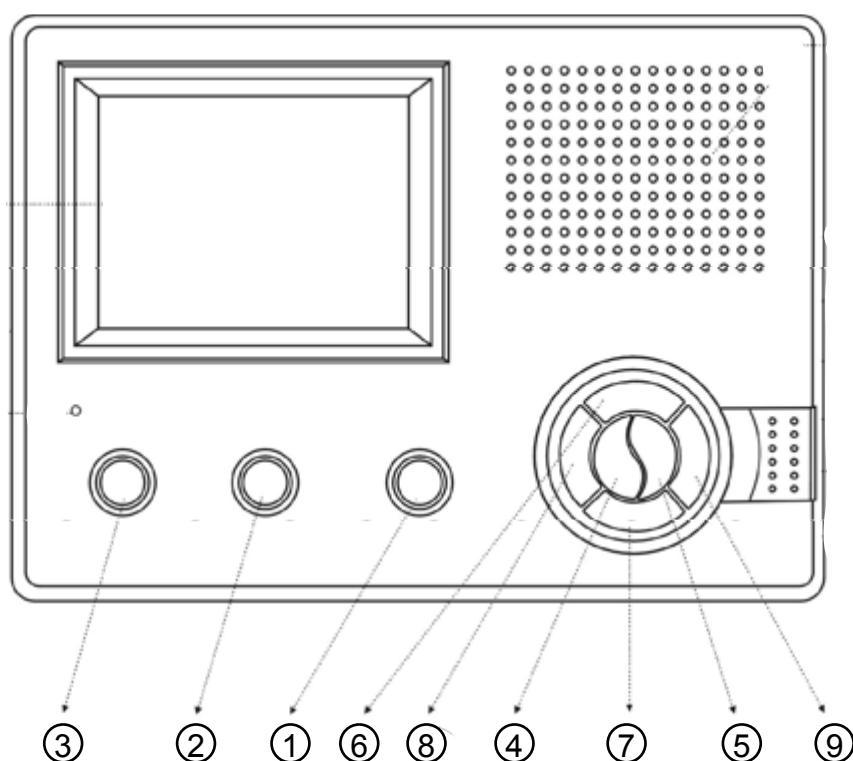

		Operation during INTERCOM Mode Intercom mode is activated by pressing the Talk button when a call IS made from outside.	Operation during MONITOR Mode Monitor mode is activated by pressing the Talk button when NO call is made from outside.
1)	Talk button:	Answer call, Mute	
2)	Monitor button:		View from outdoor station
3)	Unlock button:	Open door	Alarm on/off
4)	Photo button:		View pictures (use buttons up/down)
5)	Confirm button:	Finish conversation	Delete pictures
6)	Up button:		Adjust time up, Next picture
7)	Down button:		Adjust time down, Last picture
8)	Left button:	Decrease volume	Change time (minute,hour)
9)	Right button:	Increase volume	Change time (hour,minute)